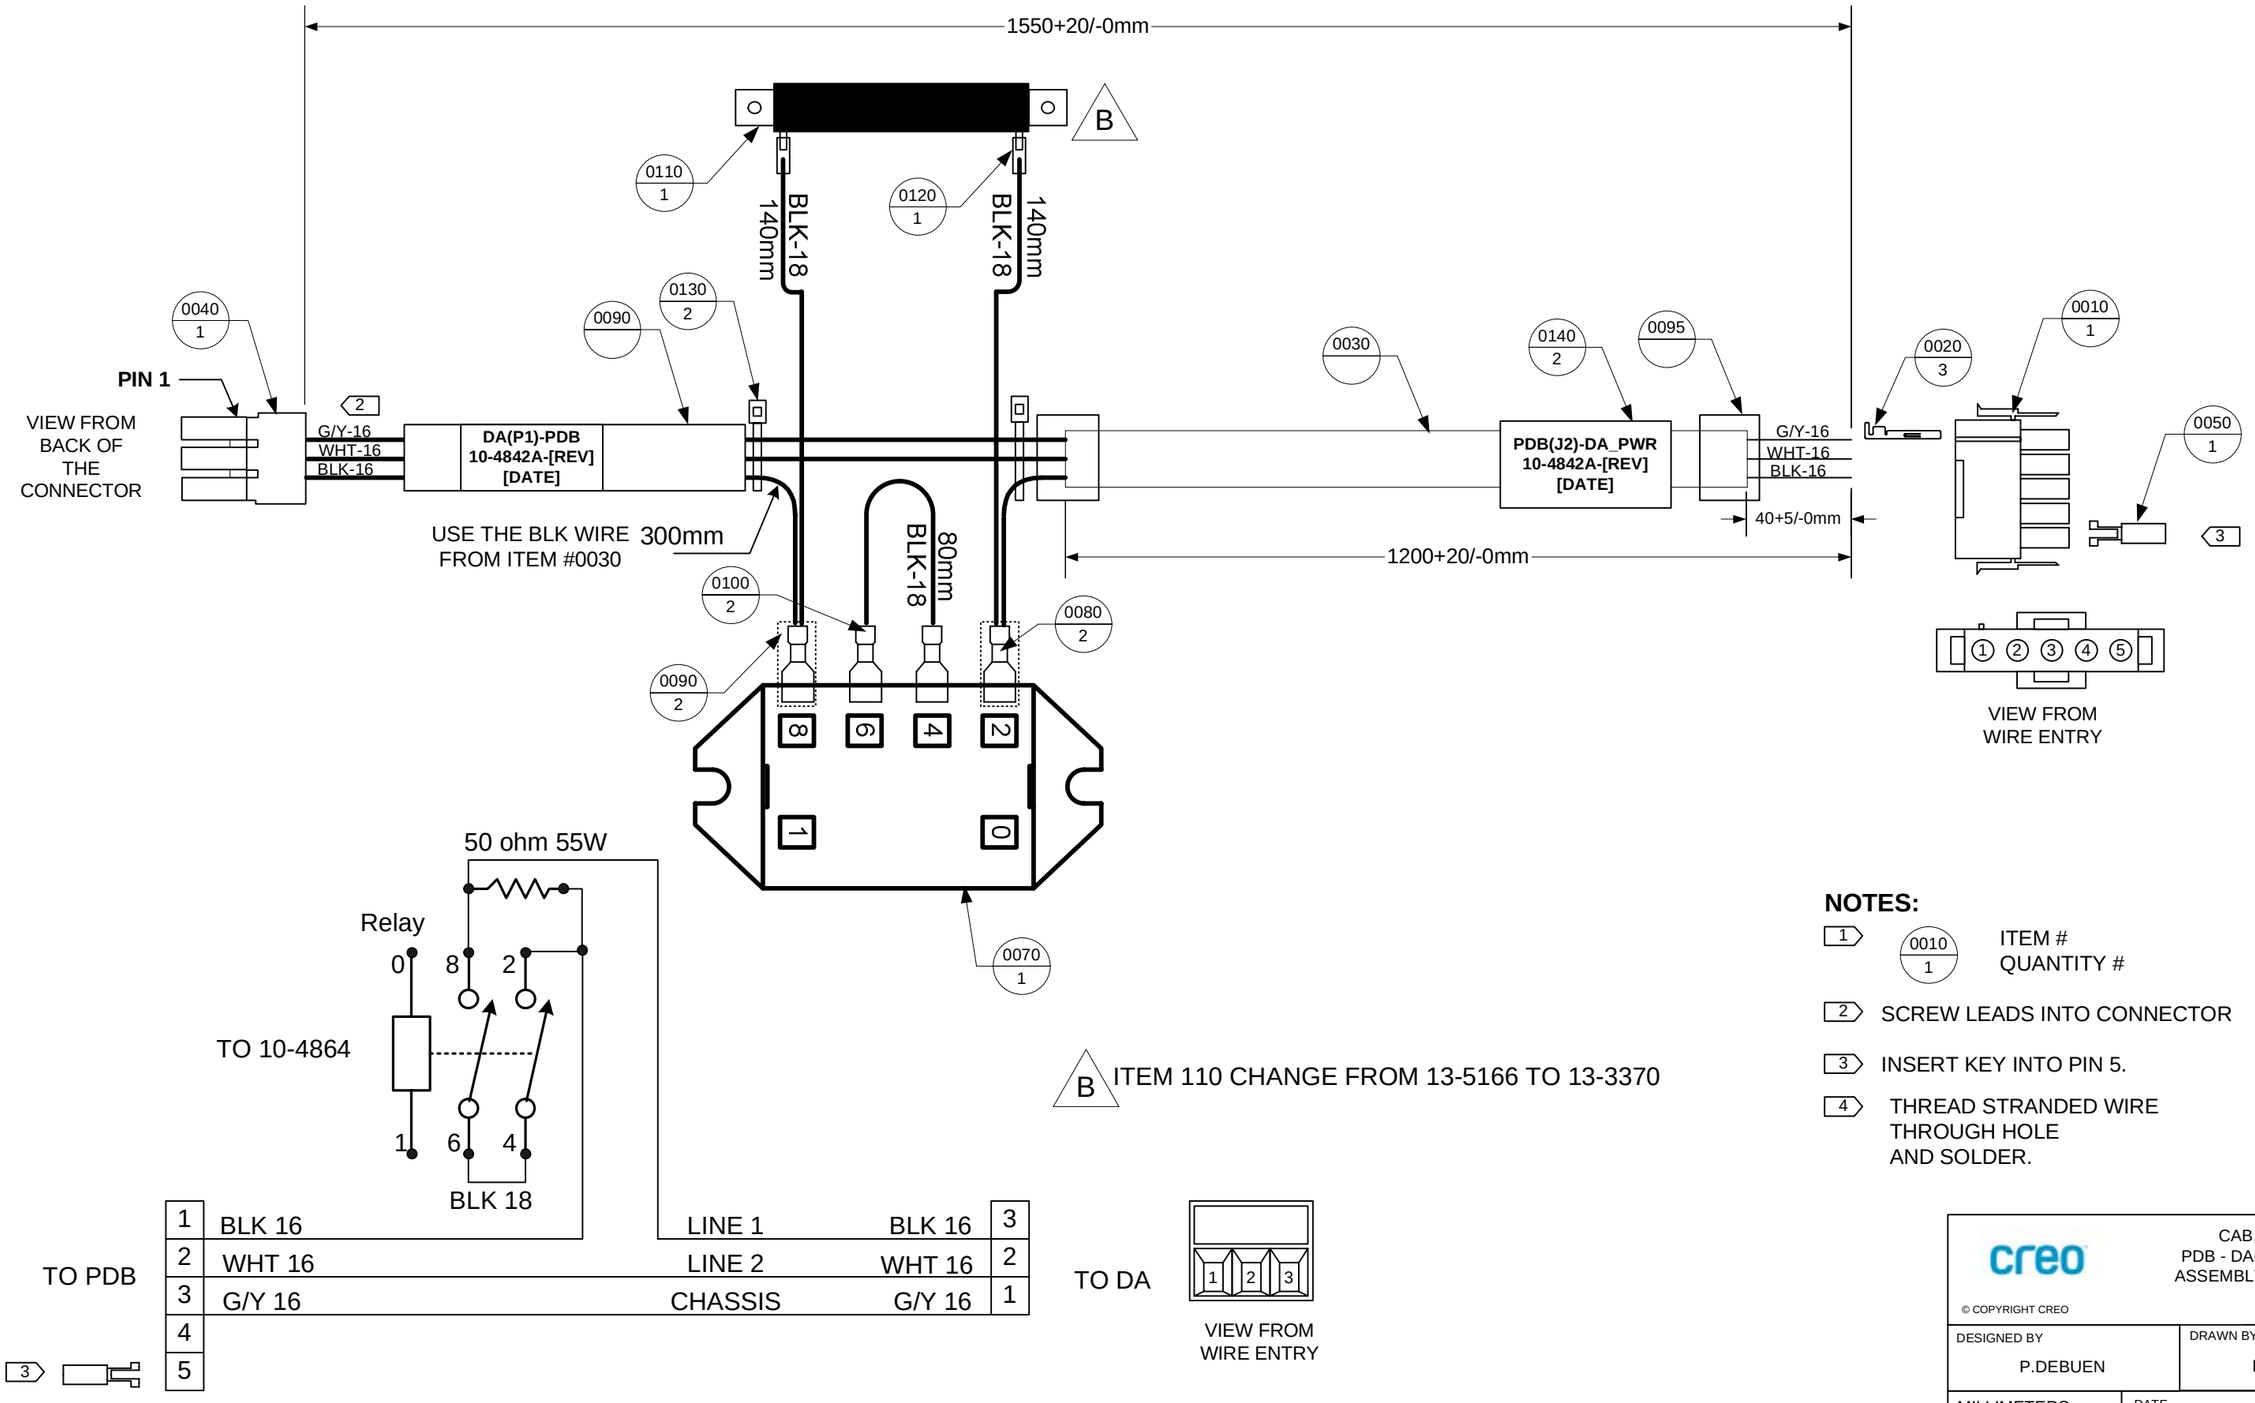


B ITEM 110 CHANGE FROM 13-5166 TO 13-3370

NOTES:

1. 0010 / 1 — ITEM # / QUANTITY #
2. SCREW LEADS INTO CONNECTOR
3. INSERT KEY INTO PIN 5.
4. THREAD STRANDED WIRE THROUGH HOLE AND SOLDER.

© COPYRIGHT CREO

CAB,ASSY,
PDB - DA(PWR),TSM
ASSEMBLY DRAWING

DESIGNED BY	DRAWN BY			
P.DEBUEN	P.DEBUEN			
MILLIMETERS UNLESS SPECIFIED	DATE MAY 18, 2001	SIZE B	SCALE NTS	
PART NO.	REV	DOC	SHEET	OF
10 - 4842A - B	AD	1	1	

LAST REVISED Friday, October 31, 2003