
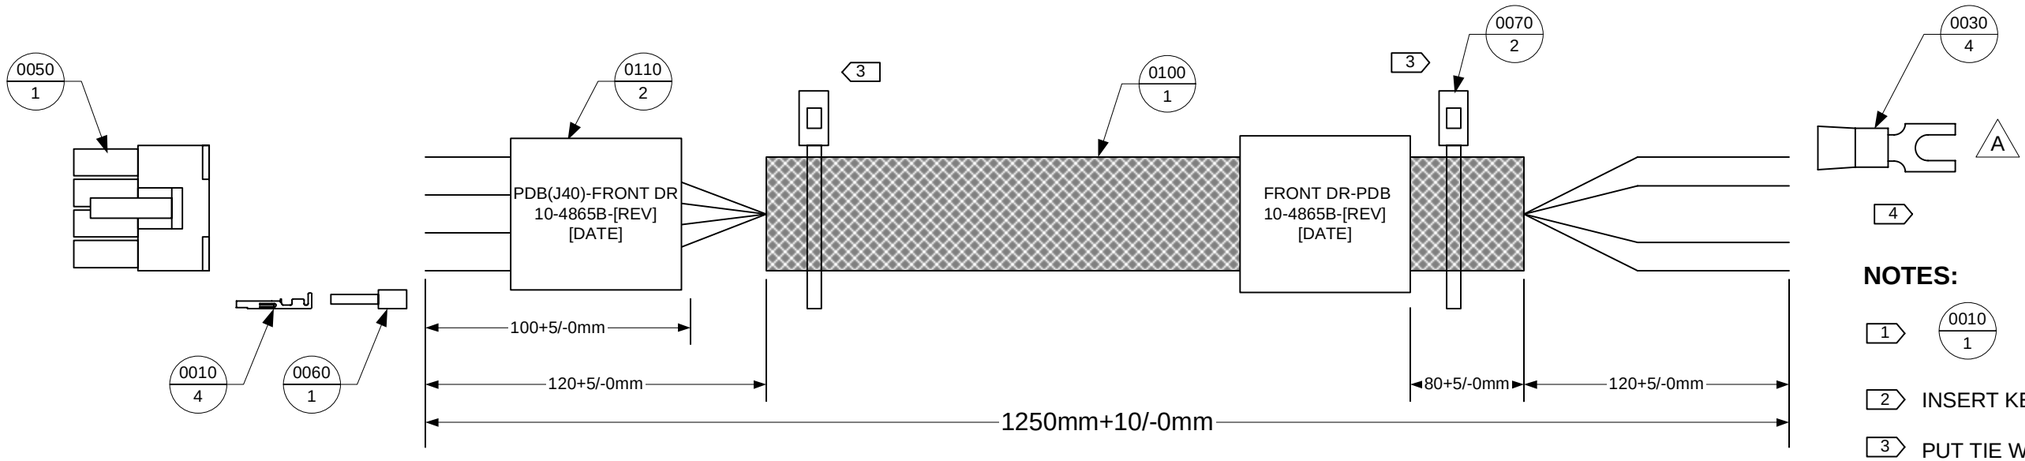



## NOTES:

1. 0010 / 1 — ITEM # QUANTITY #
2. INSERT KEY INTO PIN 5
3. PUT TIE WRAPS AT BOTH ENDS OF EXPANDO
4. MARK THE CONNECTOR AGAINST ITS DESTINATION WITH BLACK PERMANENT PEN ON THE WHITE HEATSHRINK.

A. Change item 0030 from 16-3858 to 196-00003.
label designation are also being changed

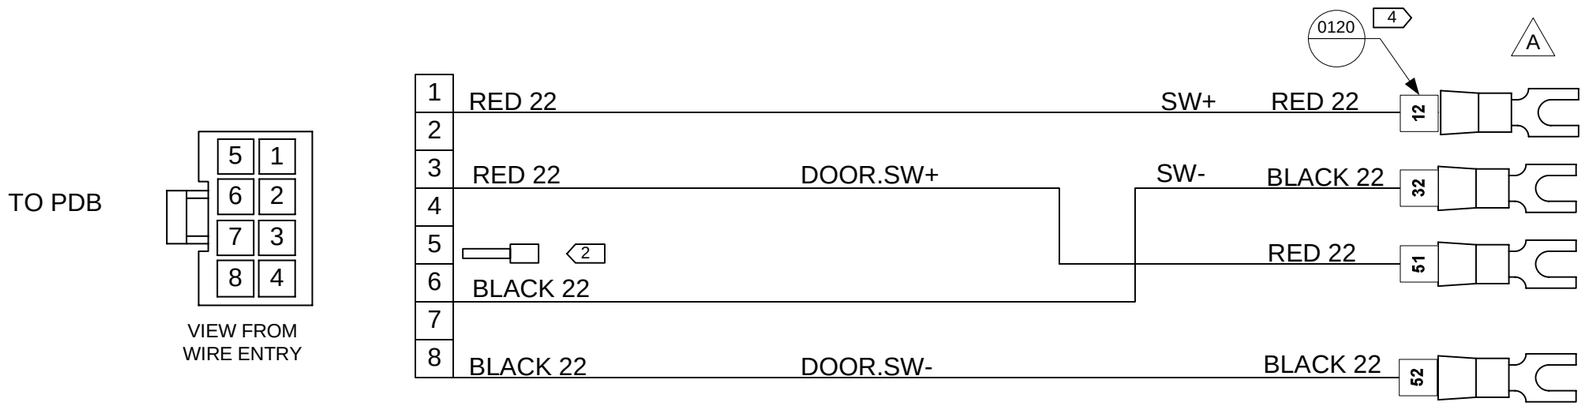


© COPYRIGHT CREO

CAB,ASSY, PDB(LOOP1)-FRONT DOOR,TSM ASSEMBLING DRAWING

| DESIGNED BY | DRAWN BY |
|---|---|
| P.DEBUEN | S. CHEUNG |

| MILLIMETERS UNLESS SPECIFIED | DATE | SIZE | SCALE |
|---|---|---|---|
| | 2001:SEPT:18 | B | NTS |

| PART NO. | REV | DOC | SHEET | OF |
|---|---|---|---|---|
| 10 - 4865B - A | AD | 1 | 1 | |

**LAST REVISED Wednesday, November 19, 2003**