

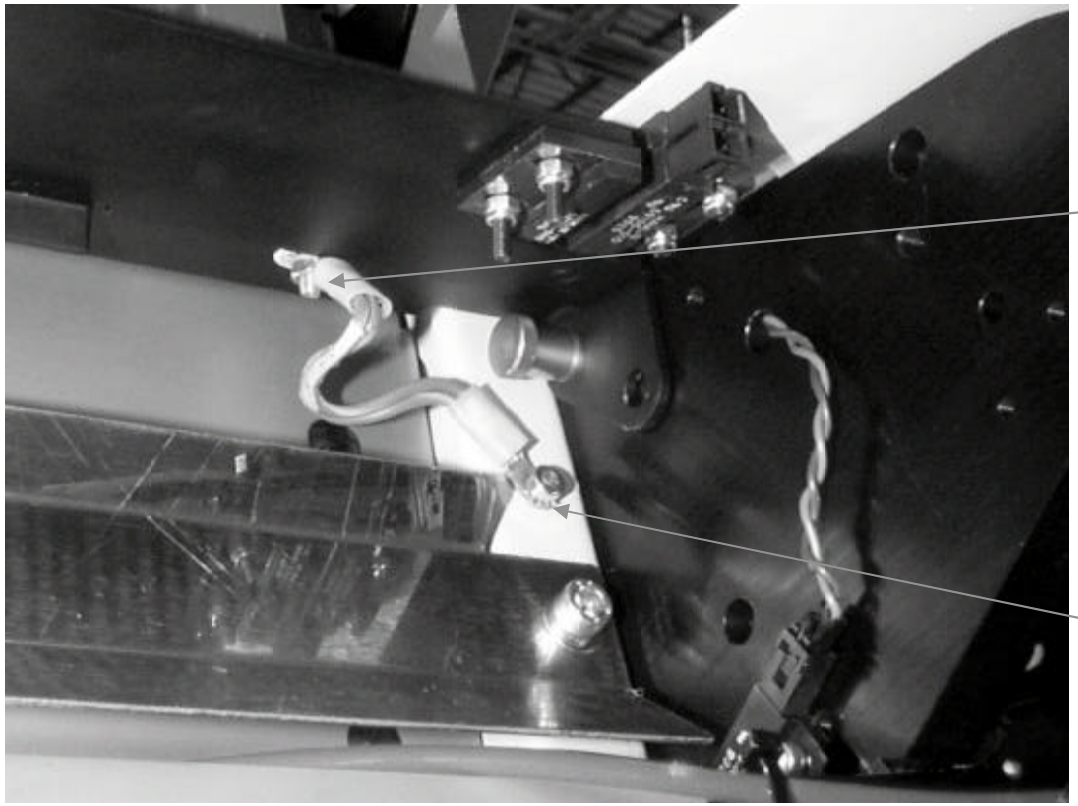


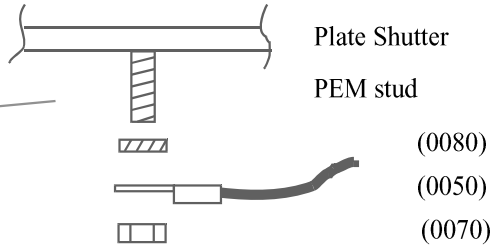

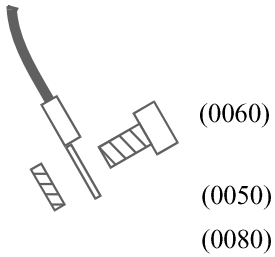

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
E	E897	2002:NOV:25	S.CHEUNG	C.RUECK


CREO


TRENDSETTER TS3244 ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.


DESIGNED BY	DRAWN BY		
P MOWAT	P MOWAT		
MILLIMETERS UNLESS SPECIFIED	DATE 1997:MAY:28	SIZE A	SCALE N.T.S.


PART NO.	REV	DOC	SHEET	OF
11-0560B – E AD			1	4

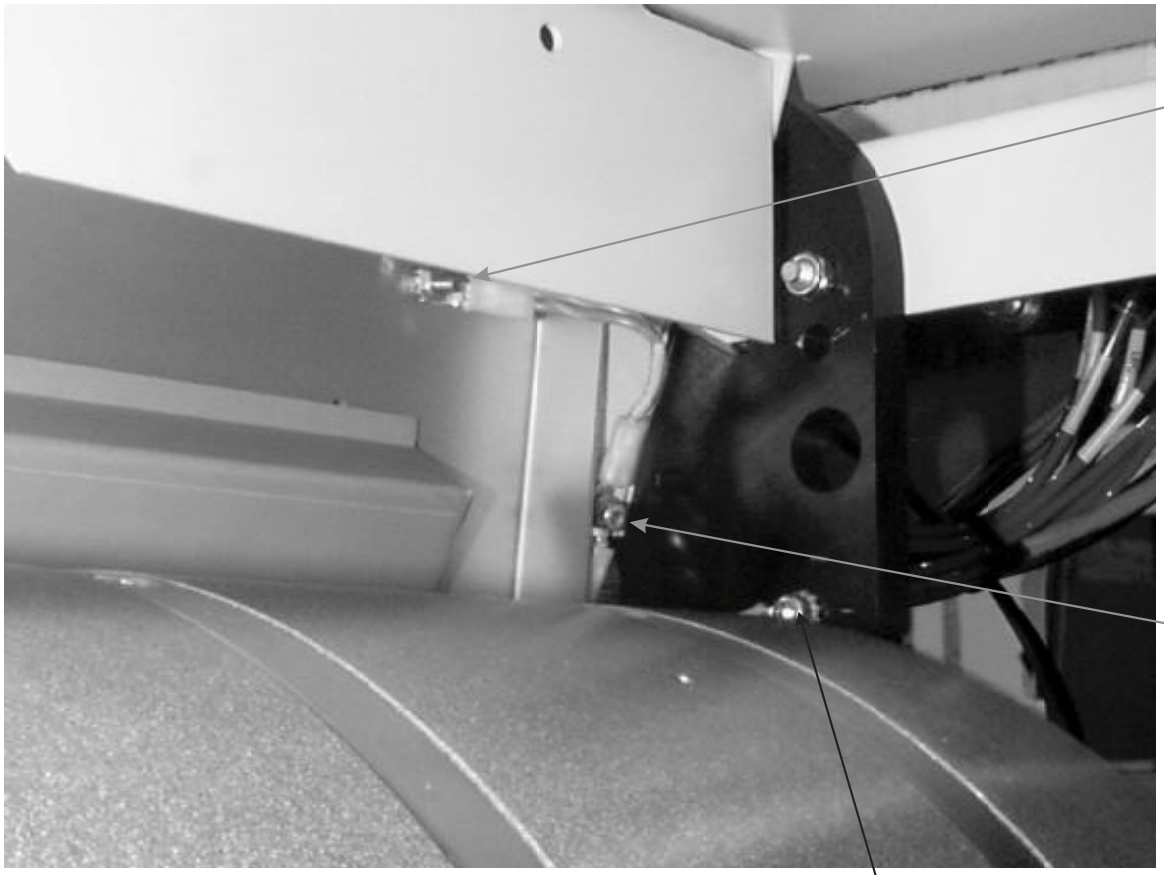

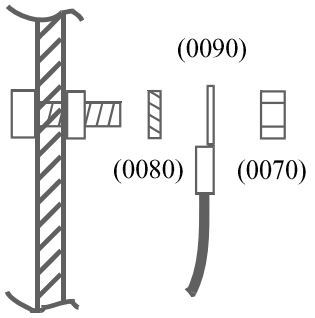

Load ramp (screw is part of load ramp assembly)

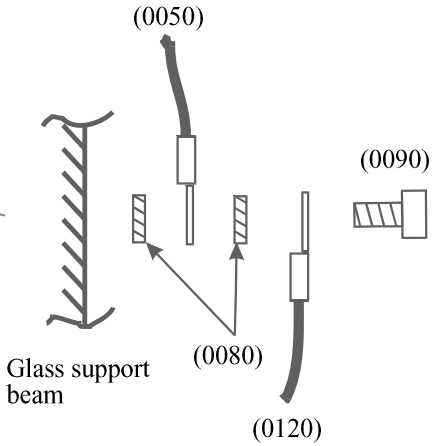

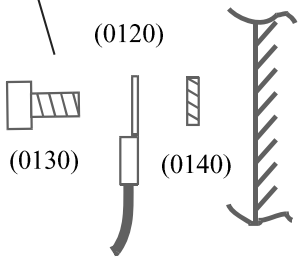

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
E	E897	2002:NOV:25	S.CHEUNG	C.RUECK


CREO


TRENDSETTER TS3244 ASSEMBLY DRAWING


© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY P MOWAT	DRAWN BY P MOWAT		
MILLIMETERS UNLESS SPECIFIED	DATE 1997:MAY:28	SIZE A	SCALE N.T.S.

PART NO.	REV	DOC	SHEET	OF
11-0560B	E	AD	2	4

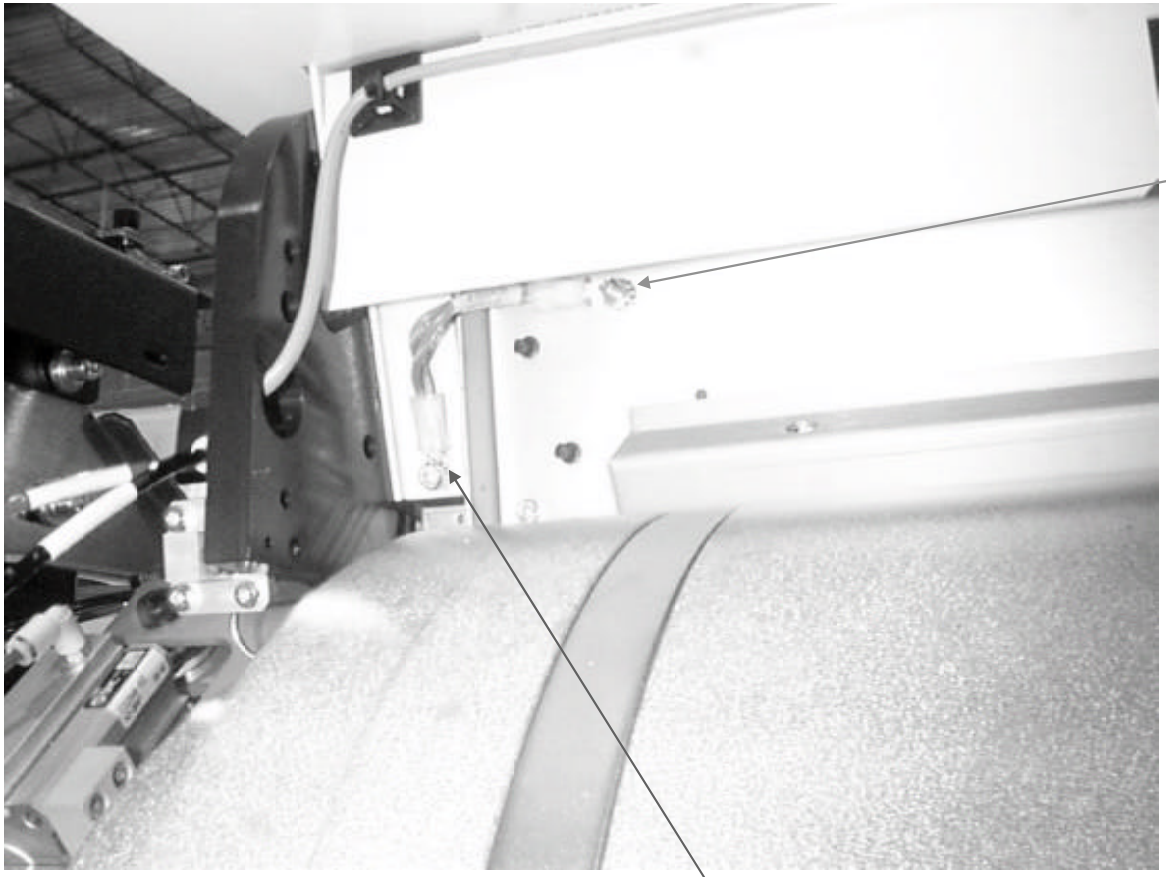

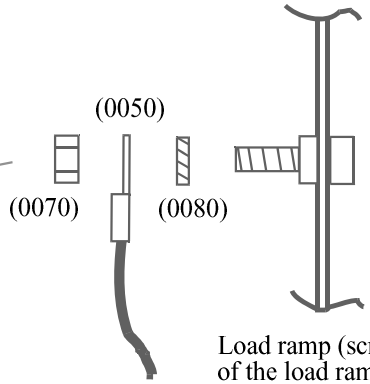

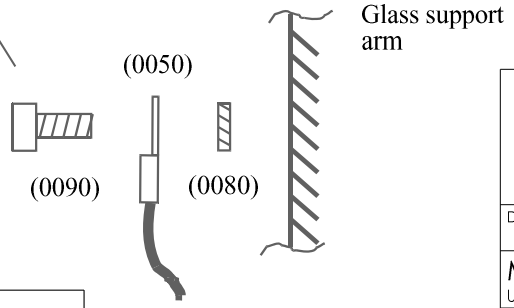

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
E	E897	2002:NOV:25	S.CHEUNG	C.RUECK

TRENDSETTER TS3244 ASSEMBLY DRAWING


© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY		
P MOWAT	P MOWAT		
MILLIMETERS UNLESS SPECIFIED	DATE 1997:MAY:28	SIZE A	SCALE N.T.S.


PART NO.	REV	DOC	SHEET	OF
11-0560B — E	AD		3	4


E	E897	2002: NOV: 25	S.CHEUNG	C.RUECK
REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY

NOTES:
01 LOCTITE 242 ALL FASTENERS ON ALL SHEETS EXCEPT AS NOTED. DO NOT USE LOCTITE WITH GROUND SCREWS, NYLOC NUTS, WHERE LOCK WASHERS ARE USED, WITH PRE-APPLIED SCREWS, OR WITH TEMPERATURE SENSORS.
02 INCLUDES ALL EXTERNAL PANELS.
03 USE EXISTING FASTENERS FROM LOWER LEVEL ASSEMBLY
04 MESH TOWARDS FAN.

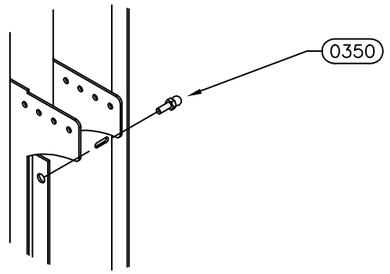



DETAIL A

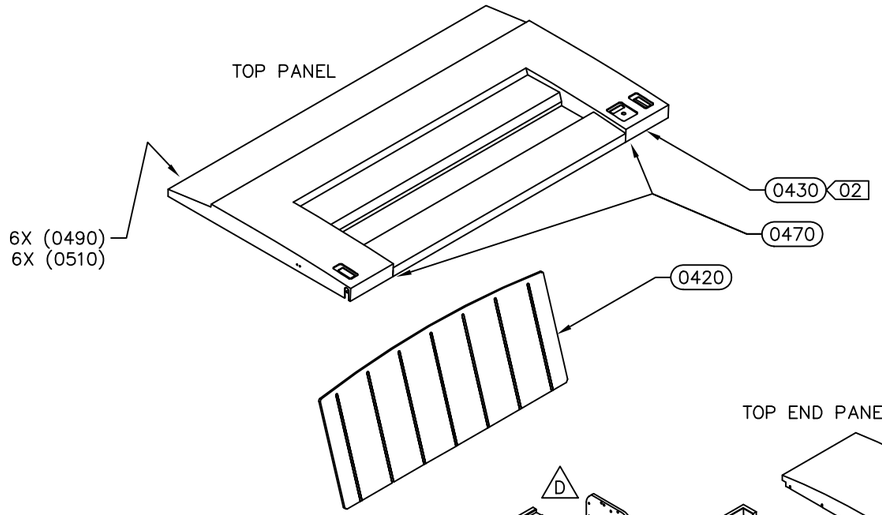

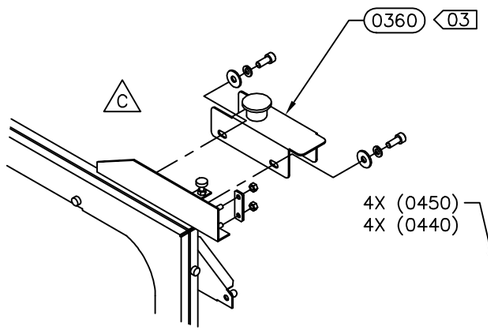


DETAIL B

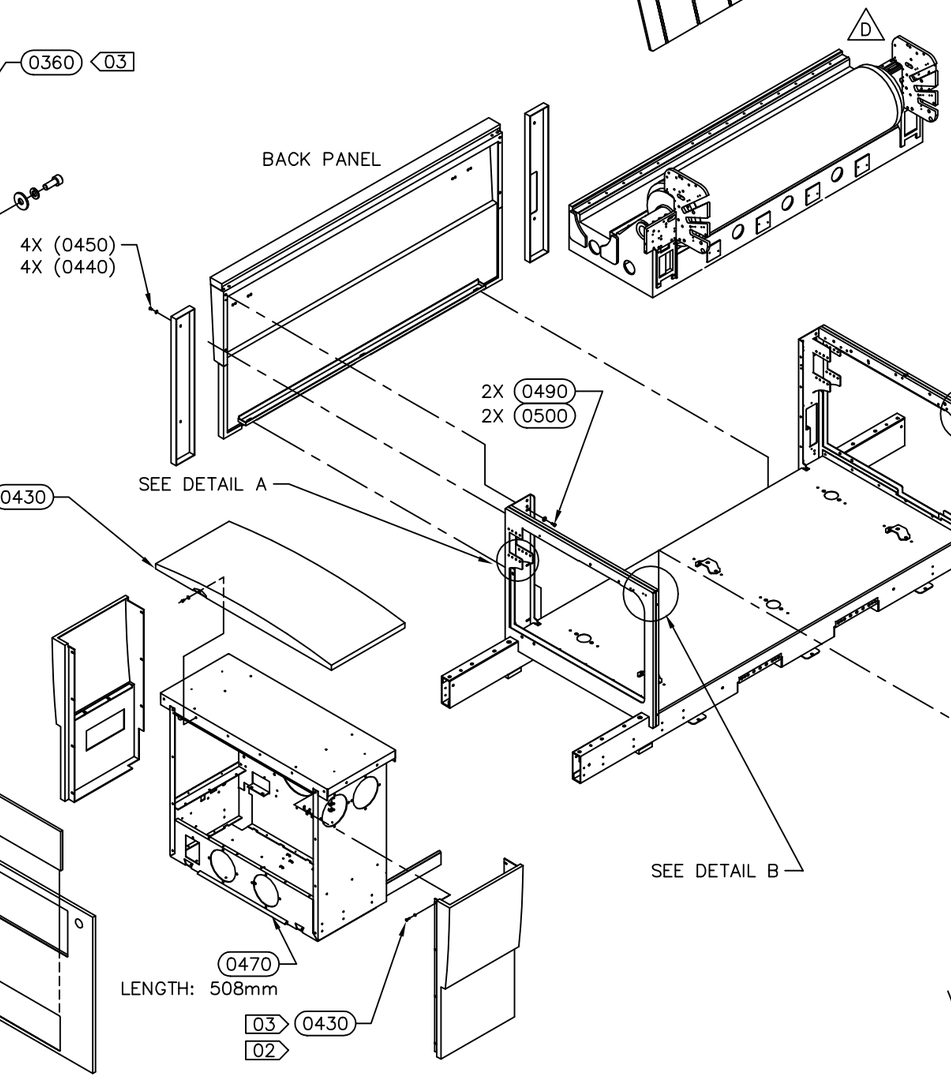


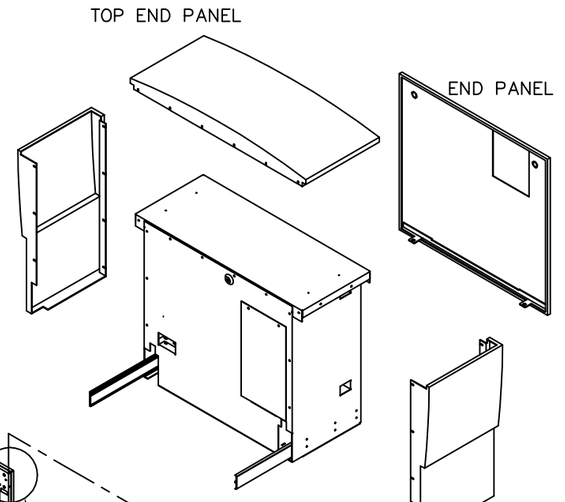

QUARTER PANEL

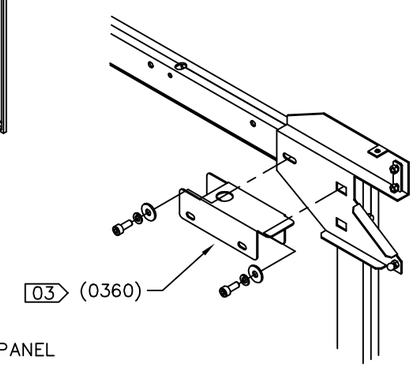

DETAIL C

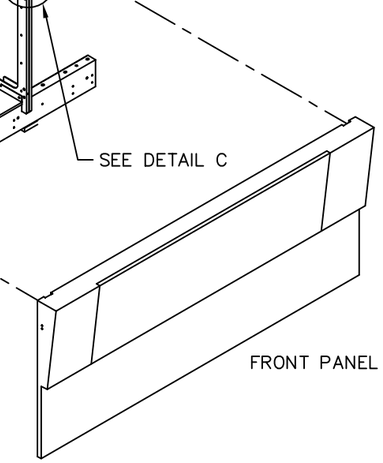

VIEWS EXPLODED FOR CLARITY

E NO CHANGES ON THIS DRAWING

CREO

ASSY, TRENDSETTER
TS3244
ASSEMBLY DRAWING

© COPYRIGHT CREO PRODUCTS INC.

DESIGNED BY C. CUMMINGS	DRAWN BY N WILSON			
MILLIMETERS UNLESS SPECIFIED	DATE 1997: JAN: 16	SIZE B	SCALE 1: 25	
PART NO. 11-0560B-E AD	REV	DOC	SHEET 4	OF 4