
1 — USE SPACER JIG 690-00414A

NOTE: —PULLEY & MOTER SHAFT MAYBE AN INTERFERENCE FIT. HEAT UP THE ALU PULLEY TO FIT IF NEEDED.
—USE LOCTITE 609 BETWEEN MOTOR SHAFT & PULLEY.

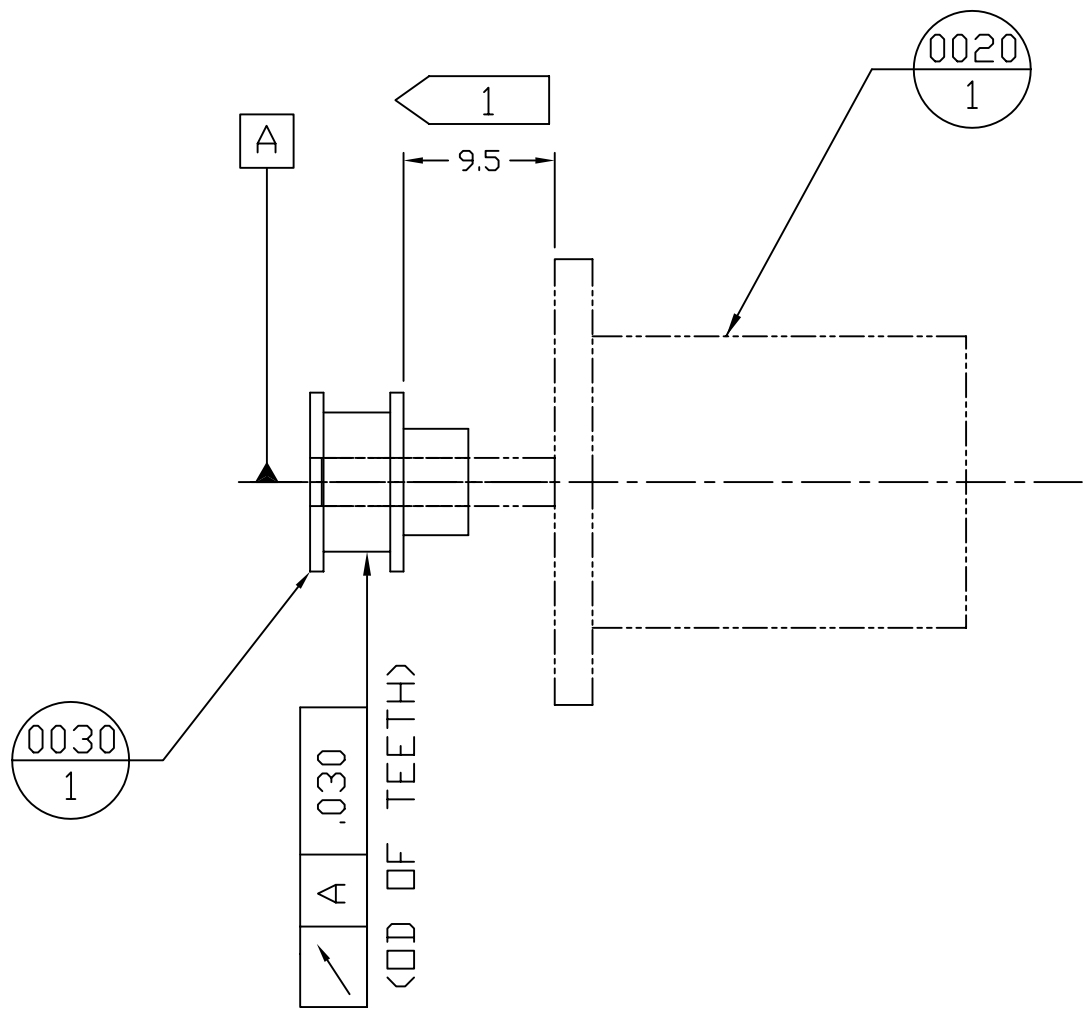

-THIS DRAWING IS NTS

CREO	ASSY, STEPPER MOTOR & PULLEY, TSM			
DESIGNED BY: C.D.CUMMINGS	DOCUMENT NUMBER: 11-1133C-A			
DRAWN BY: A.FU	APPROVED BY: C.D.CUMMINGS	LAST REVISED BY: C.RUECK	SIZE: A	SCALE: 1 : 0.0887
DESIGN DATE: 1992:AUG:25	LAST ECO: CA01863	LAST MODIFIED DATE: 2003:OCT:03	SHEET: 1 OF 1	