

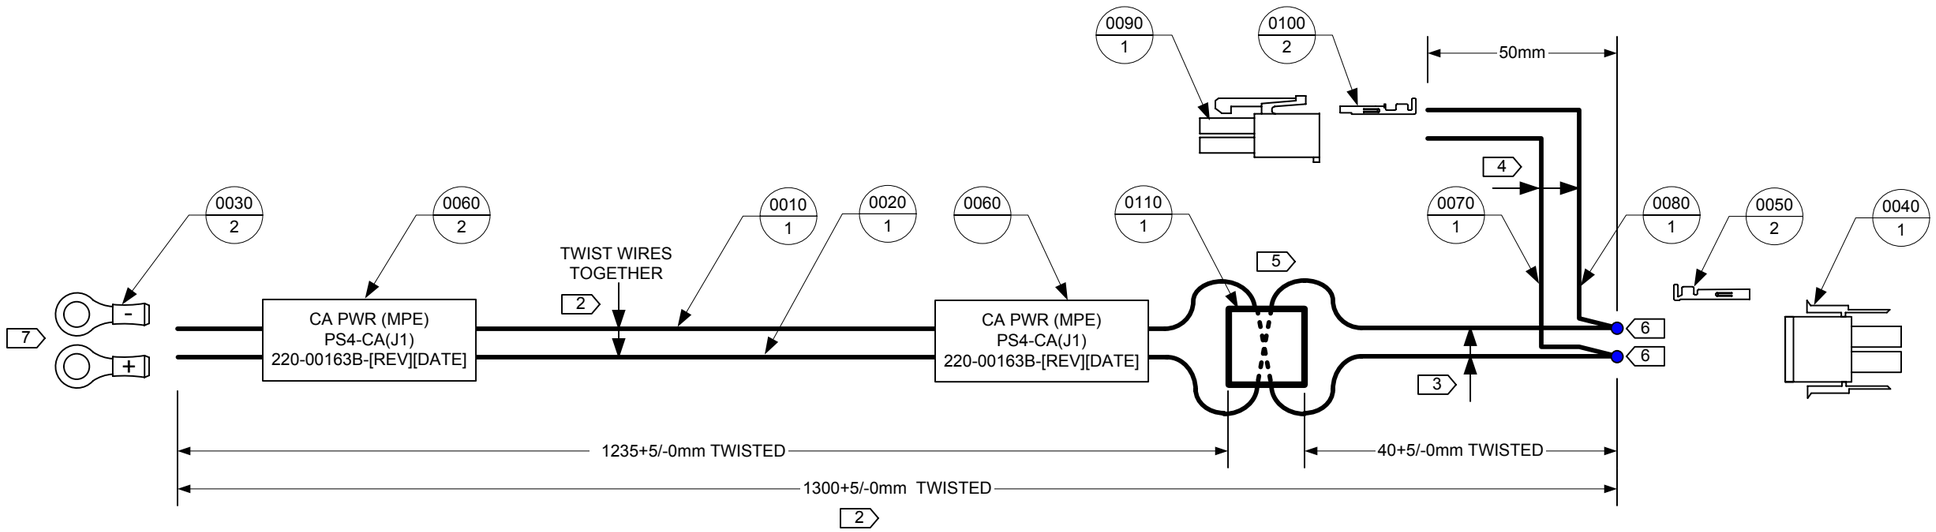


5

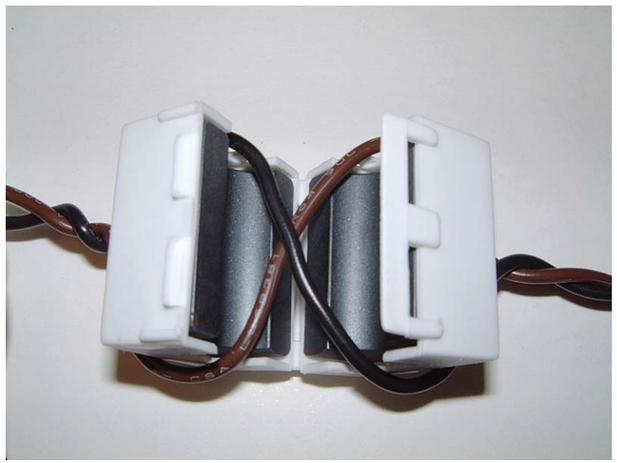

NOTES:

1. 0010 / 1 — ITEM # / QUANTITY #
2. TWIST WIRES TO THE LENGTH INDICATED.
3. TWIST WIRES FOUR TIMES TO LENGTH INDICATED.
4. TWIST WIRES SIX TIMES TO LENGTH INDICATED.
5. ENSURE THAT THE BROWN AND BLACK WIRES ENTER AND EXIT THE FERRITE FROM OPPOSITE ENDS. THEN SNAP THE ASSEMBLY TOGETHER.
6. CRIMP BOTH WIRES TOGETHER.
7. MARK “+” ON THE BROWN WIRE AND MARK “-“ ON THE BLACK WIRE WITH A PERMANENT MARKING PEN AS SHOWN.

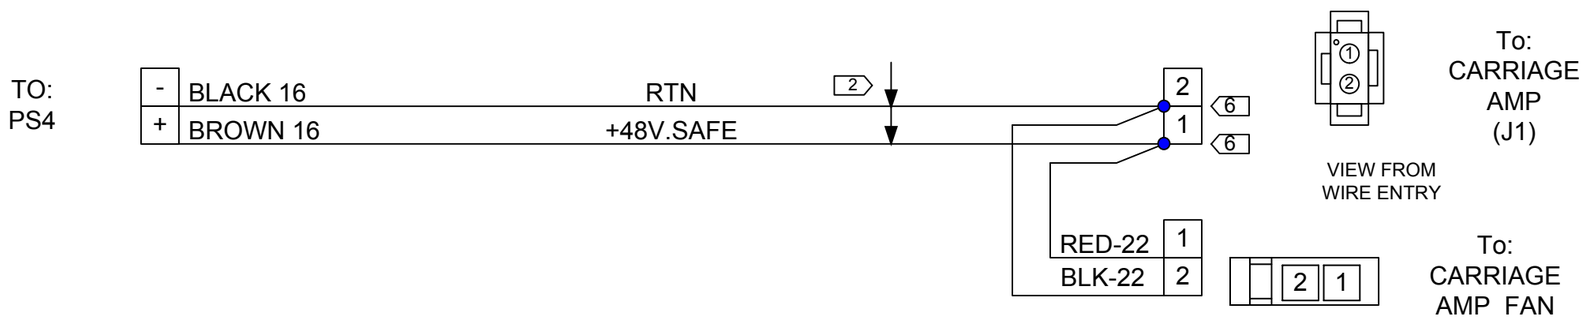

© COPYRIGHT CREO

CAB,ASSY, MPE(PS4)-CA(J1),
CARRIAGE POWER,
ASSEMBLY DRAWING

DESIGNED BY	DRAWN BY		
C.RUECK	C.RUECK		
MILLIMETERS UNLESS SPECIFIED	DATE SEPT.22,2003	SIZE B	SCALE NTS

PART NO.	REV	DOC	SHEET	OF
220 - 00163B - A	AD	1	1	

LAST REVISED Tuesday, September 23, 2003