
CONFIDENTIAL: PROPERTY OF CREO PRODUCTS INC.

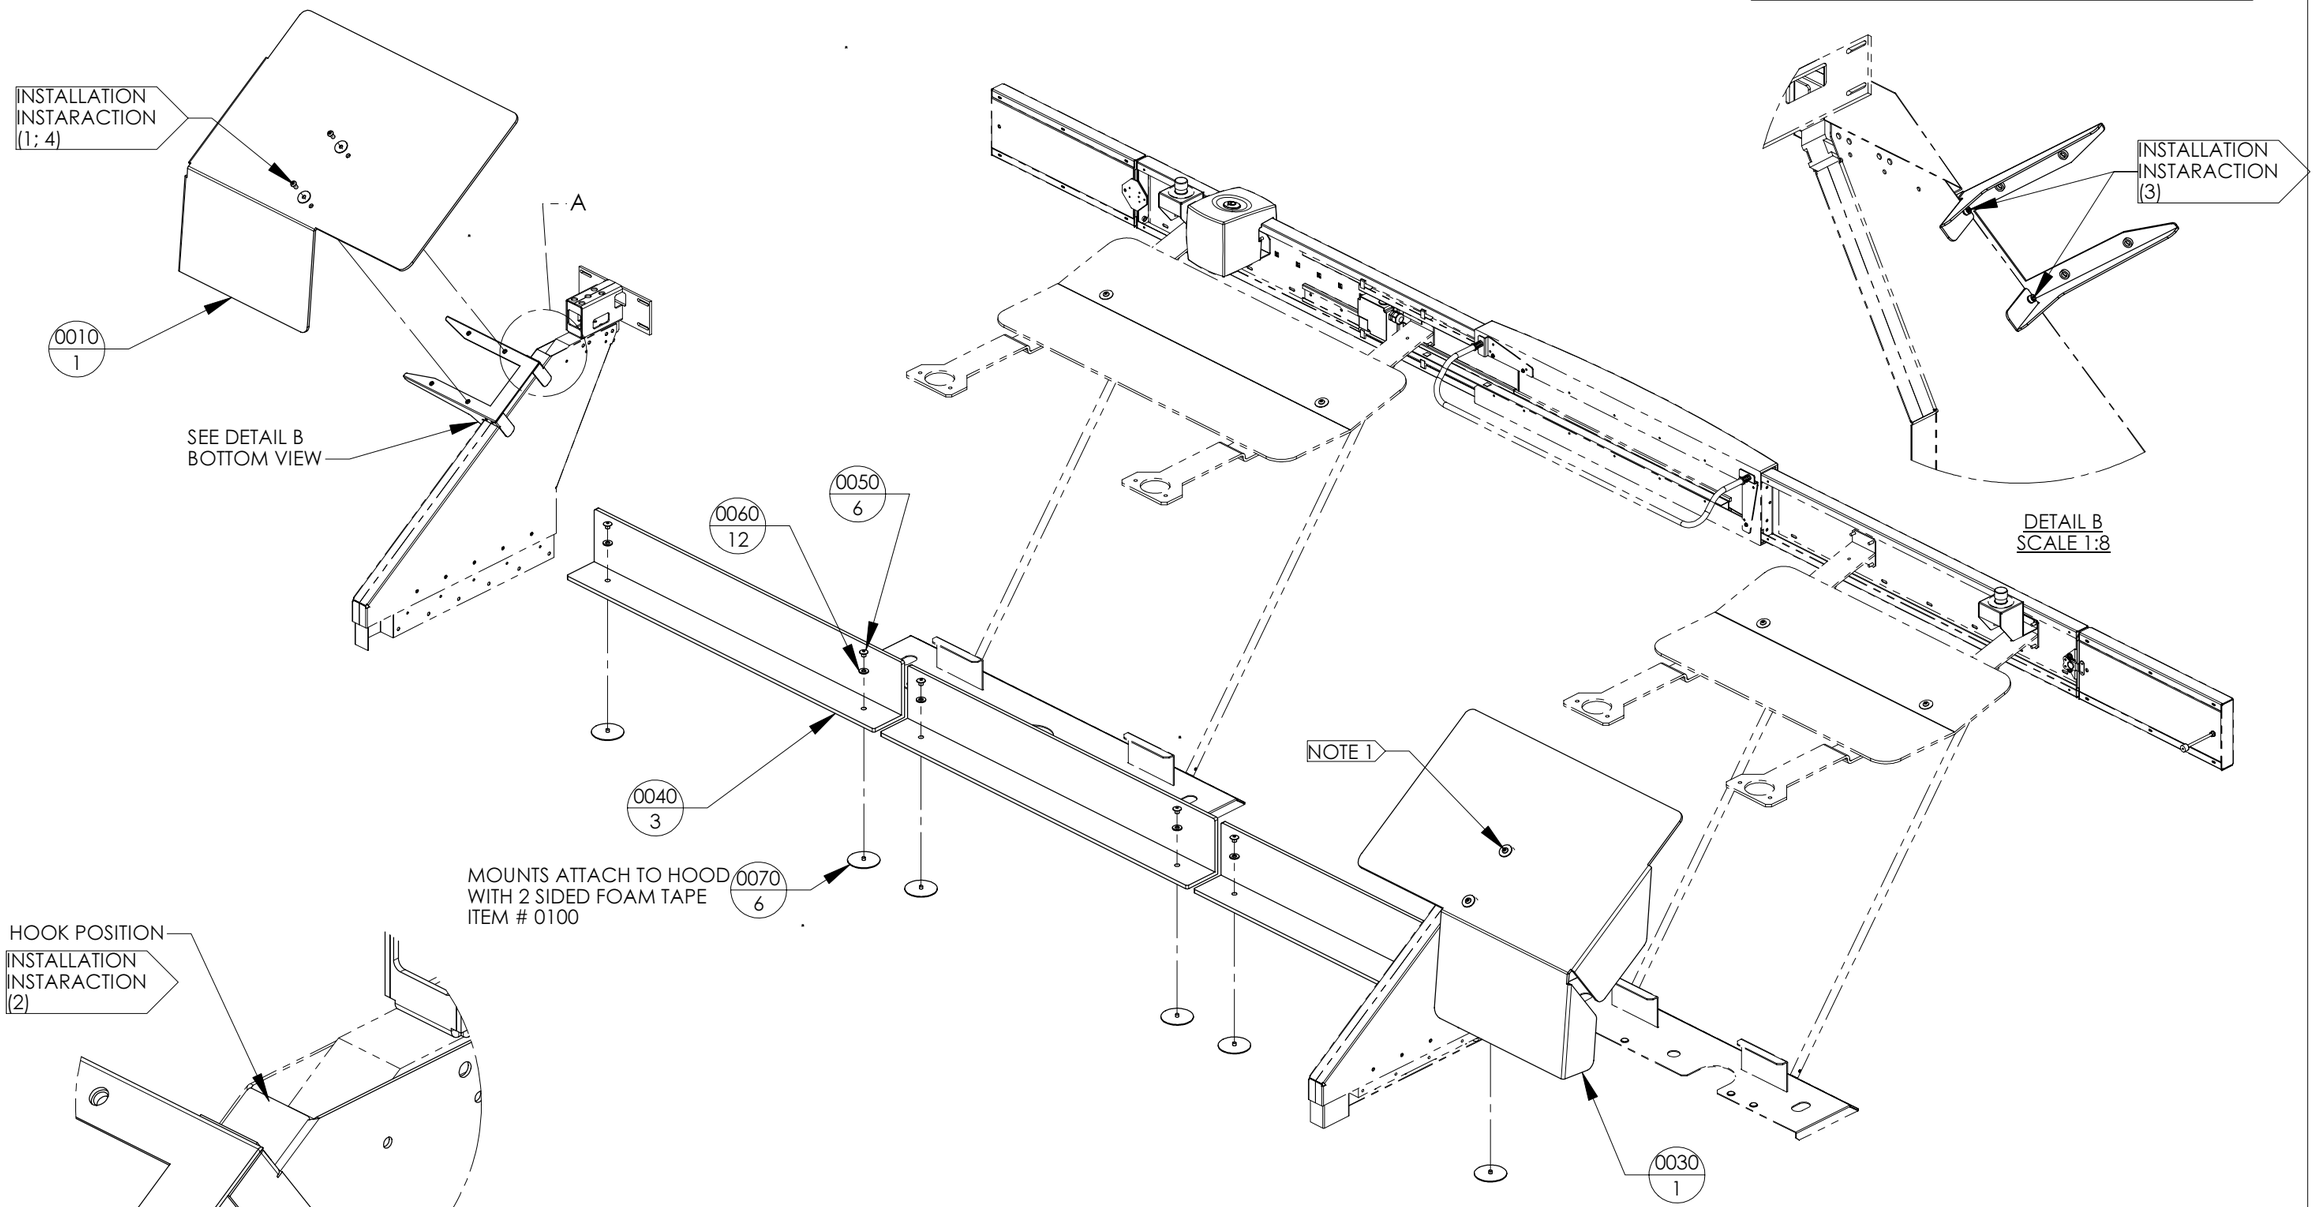

DETAIL A
SCALE 1 : 3

REAR SAFETY PANELS INSTALLATION INSTRACTION

1) DETACH LEXAN PANEL FROM THE BRACKET PRIOR TO INSTALLATION
2) HOOK UP THE BRACKET ON THE PICKER TRACK ARM (SEE DETAIL A).
3) TIGHTEN TWO M6 SCREWS AGAINST THE ARM (SEE DETAIL B).
4) MOUNT THE LEXAN PANEL BACK ON THE BRACKET USING M8 SCREW AND WASHER.

NOTES:

DO NOT USE LOCTITE ON THIS ASSY.

REV	ECO	DATE	DRAWING CHANGES BY	APPROVED BY
<R>	<E>	<D>	<B>	<A>
C	E299	2001:AUG:08	I.PRESS	J.GOFMAN

CreoScitex

KIT, SAFETY PANELS,
VAL
ASSEMBLY DRAWING

© 2001 CREO PRODUCTS INC.

DESIGNED BY	DRAWN BY			
J.GOFMAN	I.PRESS			
MILLIMETERS UNLESS SPECIFIED	DATE: 2001:AUG:22	SIZE B	SCALE 1:14	
PART NO. 50-2377A	REV C	DOC AD	SHEET 1	OF 1