Picker Arm Support Strut - FCO CA04999

Applies to

☑ Trendsetter VLF Autoloader Picker

Background

The current picker arm support strut does not lock and is easily dislodged. This creates a safety hazard when the picker arm is supported in the up position. See ECO CA04999 for details.


Tools and parts

- Kit 512-00184A


Steps

To install the new picker arm support strut:


1. Remove the existing support strut shoulder bolt and remove the strut.

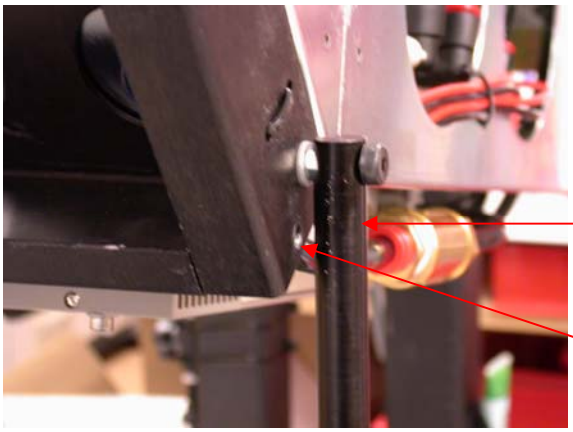

2. Install the locking pin (small bolt) in the existing hole in the picker arm. If this hole is not present, first install the new support strut and drill a 4 mm hole through the hole in the strut.

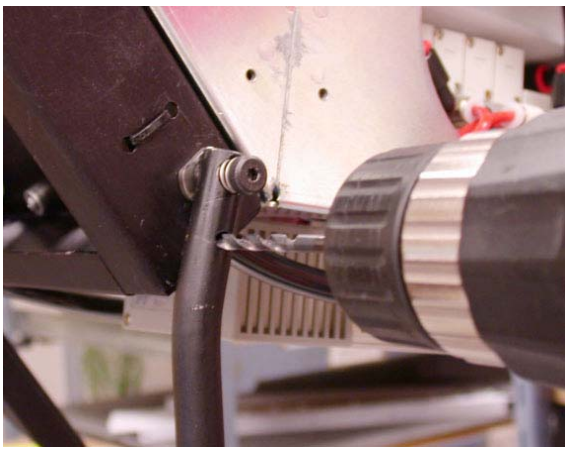

3. Install the new support strut. The locking pin should align with the hole in the support strut to lock the support strut in place when it is 90° to the surface below.

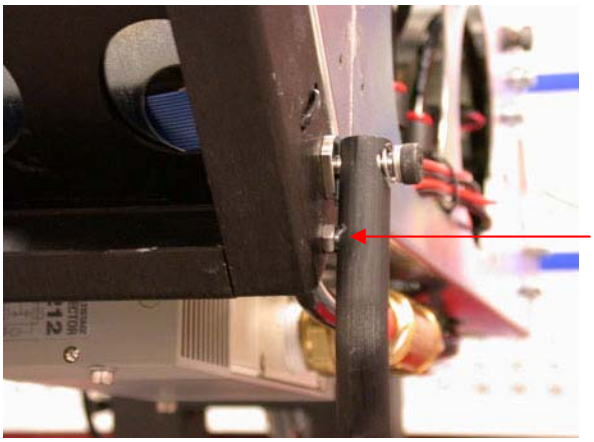



Technical contact	Marek Zgrych
Date submitted	29 July 2004
Date modified	29 July 2004