

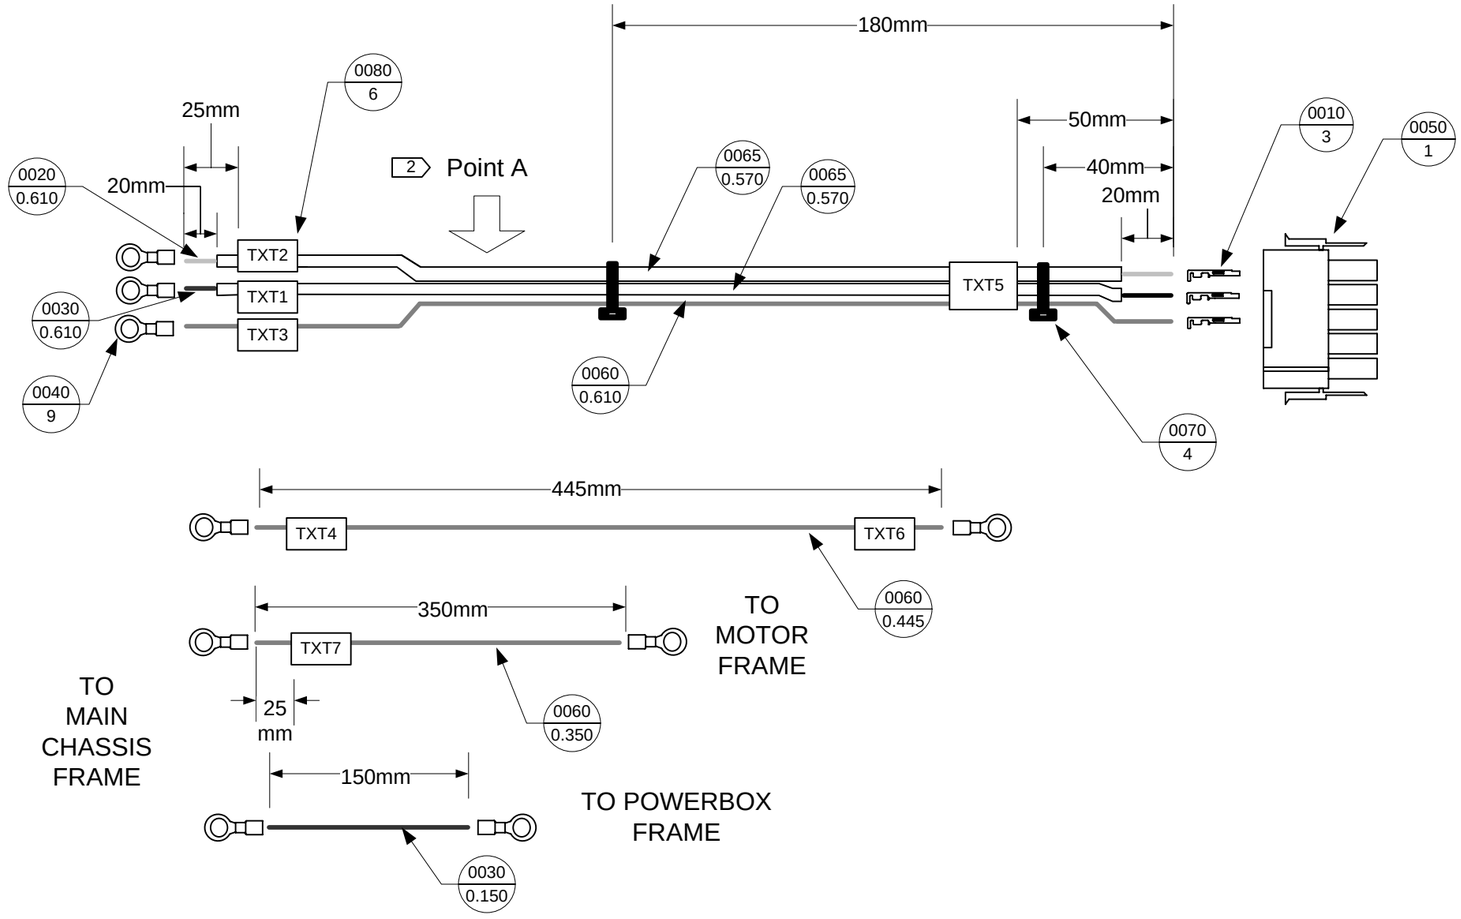


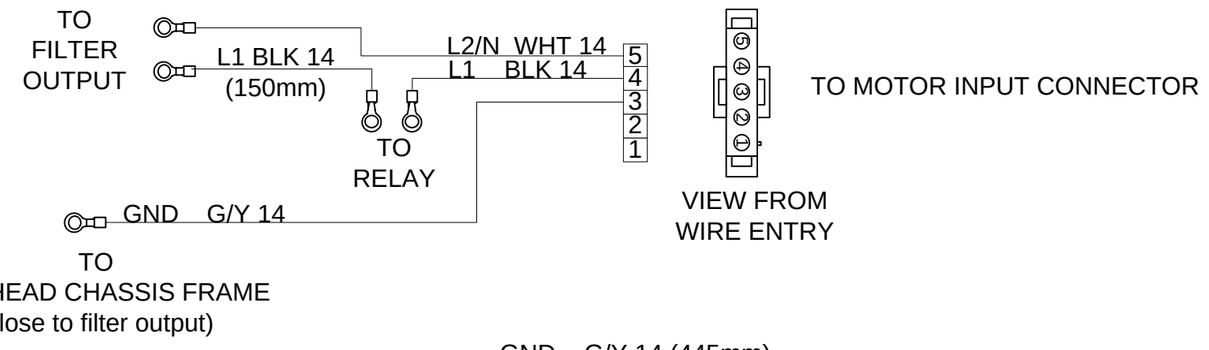

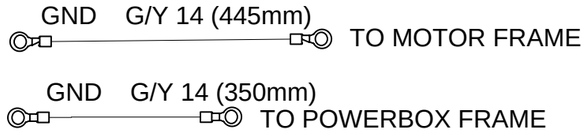

NOTES:

1. 0010 / 1 — ITEM # / QUANTITY

2. Use last cable tie (item 0070) to bundle the three loose cables to main assembly at Point ‘A’. This tie will be cut off at Creo.

creo

© COPYRIGHT CREO

CAB,ASSY,AC POWER
UDRC-B
ASSEMBLY DRAWING

DESIGNED BY	DRAWN BY			
Ian Skinner	W.Rai			
MILLIMETERS UNLESS SPECIFIED	DATE 2005:JAN:22	SIZE B	SCALE NTS	
PART NO.	REV	DOC	SHEET	OF
10 - 4945F - A	AD	1	1	