Connecting to customers network via PPP.

1.Setup:

1.1verify TTY & modem ser configured correctly:

```
  TTY                                             tty1
  TTY type                                        tty
  TTY interface                                   rs232
  Description                                     Asynchronous
Terminal
  Status                                          Available
  Location                                        01-S2-00-00
  Parent adapter                                  sa1
  PORT number                                    [0]
+
  Enable LOGIN                                    delay
+
  BAUD rate                                      [38400]
+
  PARITY                                         [none]
+
  BITS per character                             [8]
+
     Number of STOP BITS                            [1]
  TERMINAL type                                  [vt100]
     FLOW CONTROL to be used                        [xon
```


1.2 run the '**rcde_setup**' & the **ppp_setup**' scripts from:
/scitex/version/scripts/RemoteTools (For AIX4.2.1 you will need the CD's)

- Password for the new **'rdcesci'** user is **'sciremote'**
- You will have to supply the IP for the '**ppp_setup**' script from the customers network
- **Now you're host is ready to receive the connection.**


2. Create a new Dial-Up session on your PC

2.2 On your PC**, Start-----Settings----Network & Dial-Up Connections-----Make new connection**


2.3 Select the 'dial up to a private network'

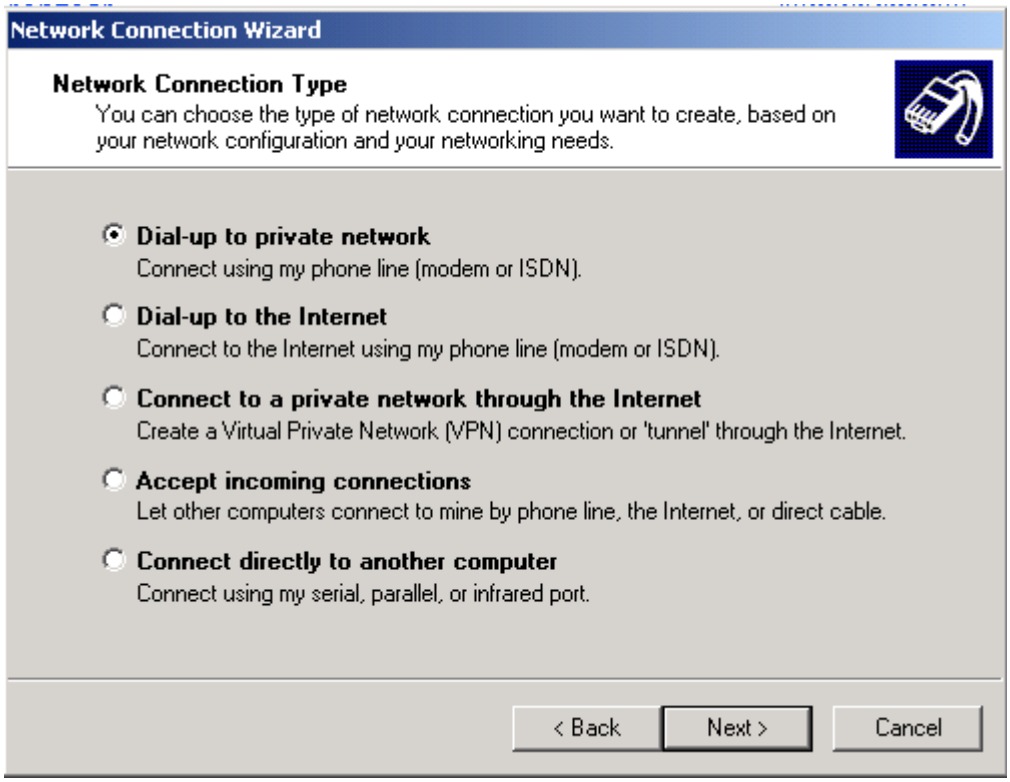


Check the modem option

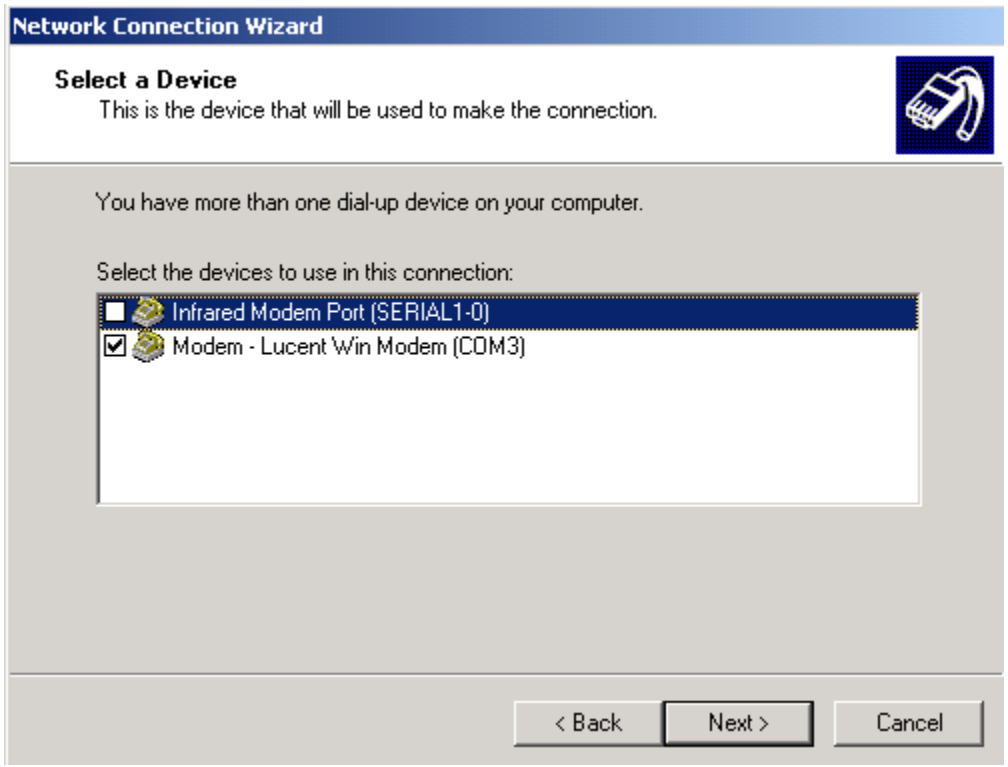

Insert the correct Tel' number

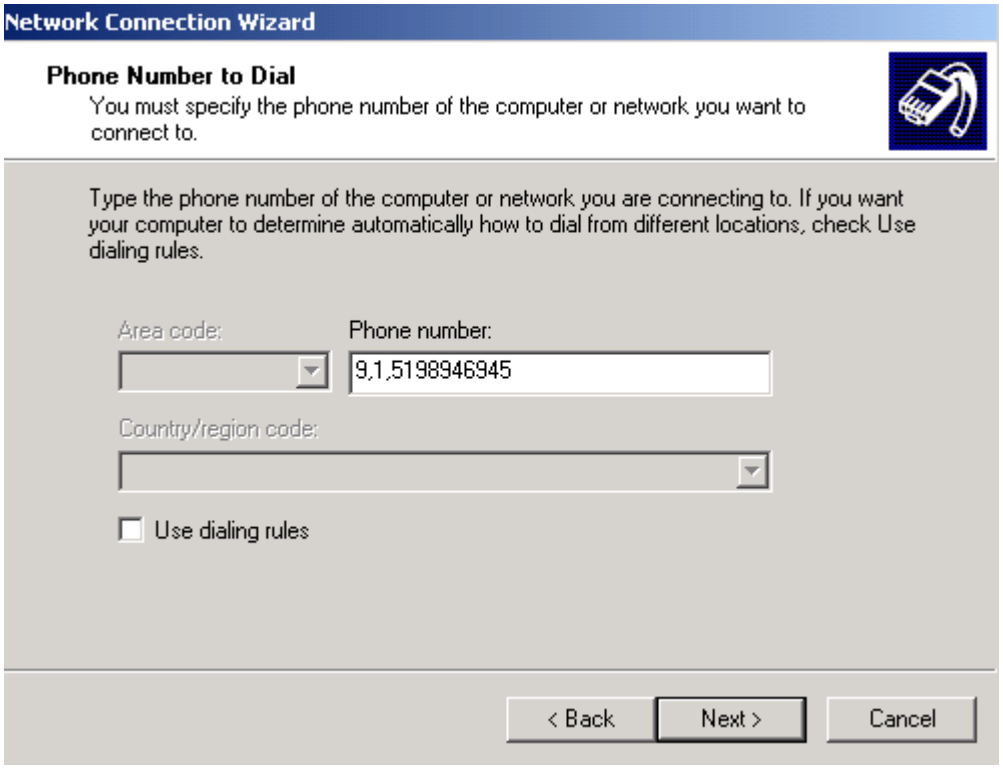


Use the ‘all users’ option on next screen

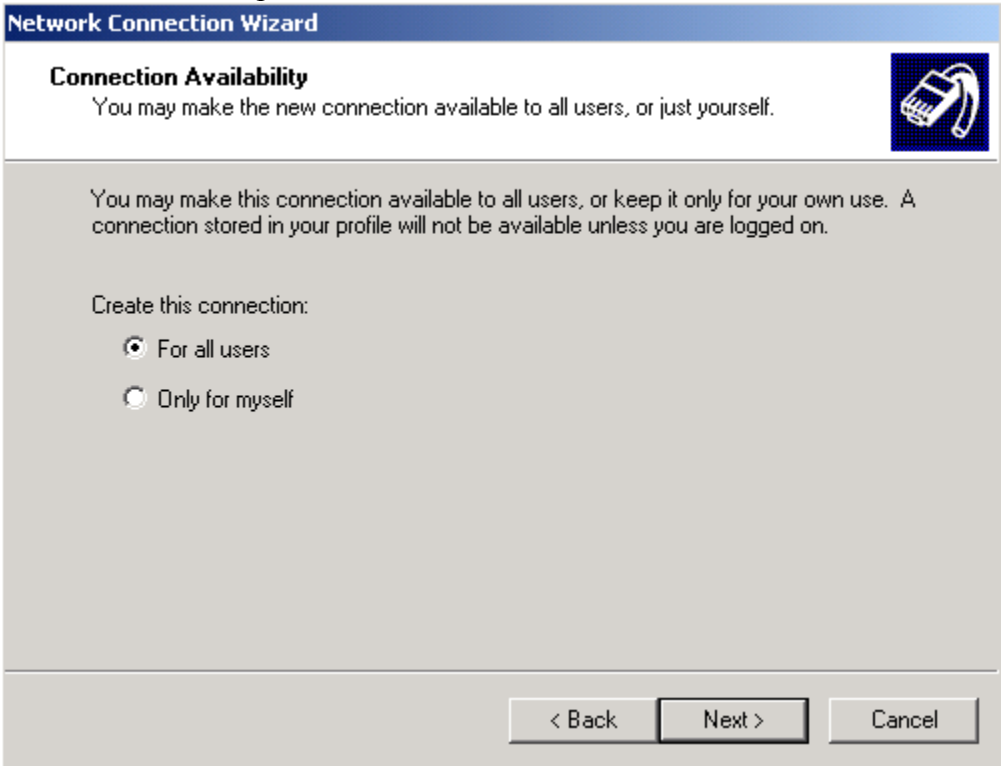


Give your session/customer name




Leave the ‘User name’ & ‘Password’ fields empty & click the **properties** button

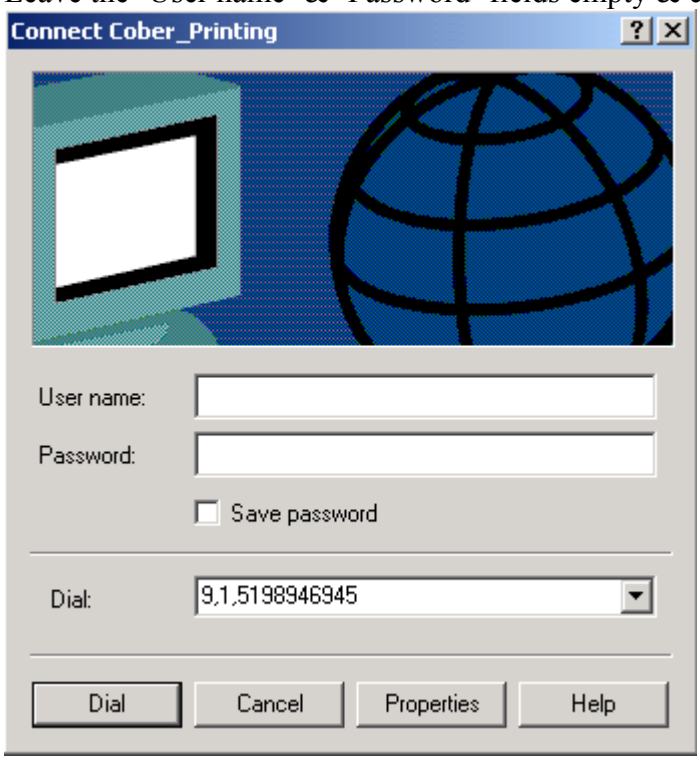


On the ‘general’ tab:

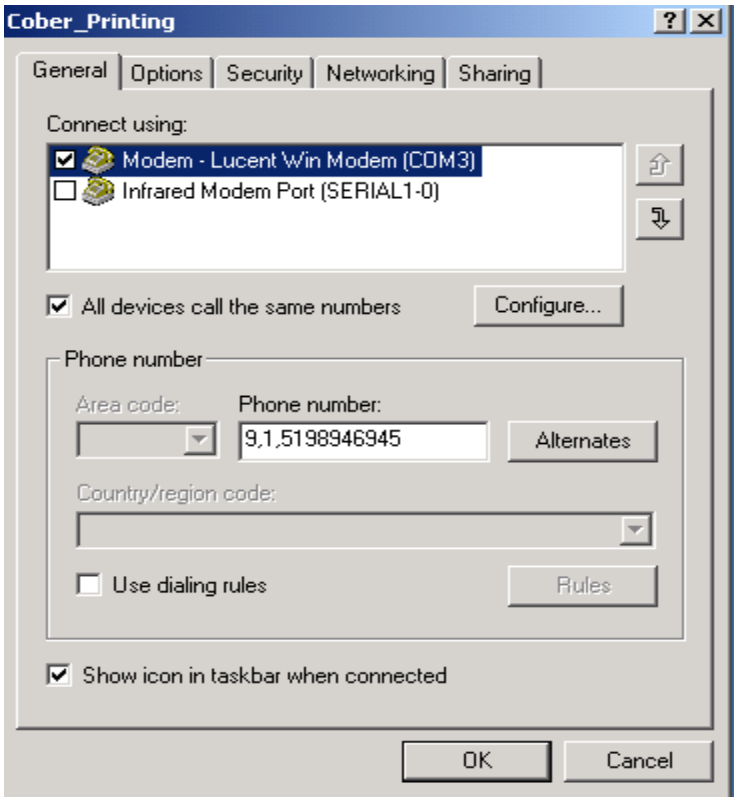


On the ‘options’ tab

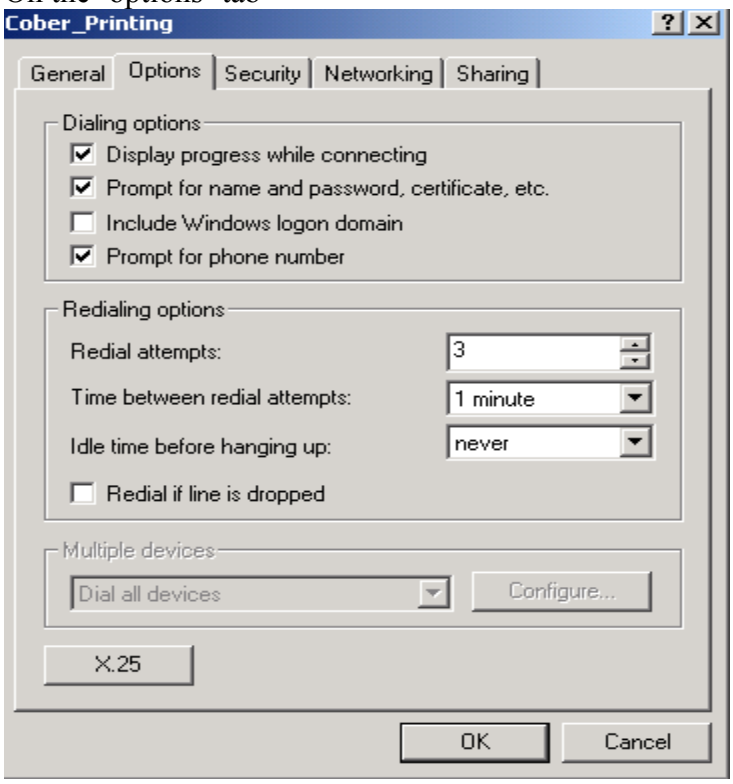

on the ‘Security’ tab, see next page

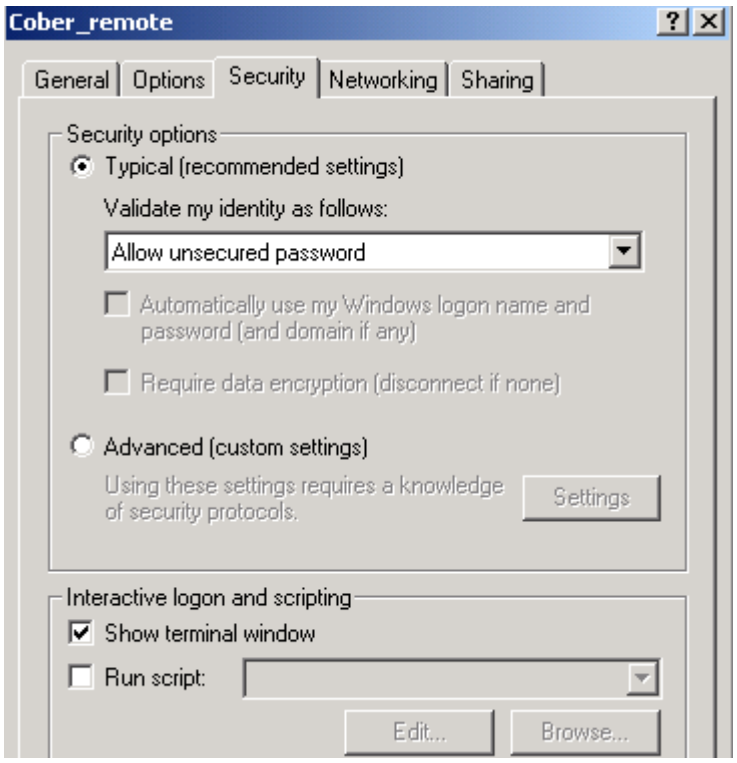


On the 'networking' tab, must have the **TCP/IP** & **Client for Microsoft Networks** selected, also check the settings under the **PPP:Windows 95/98/NT/20000** option

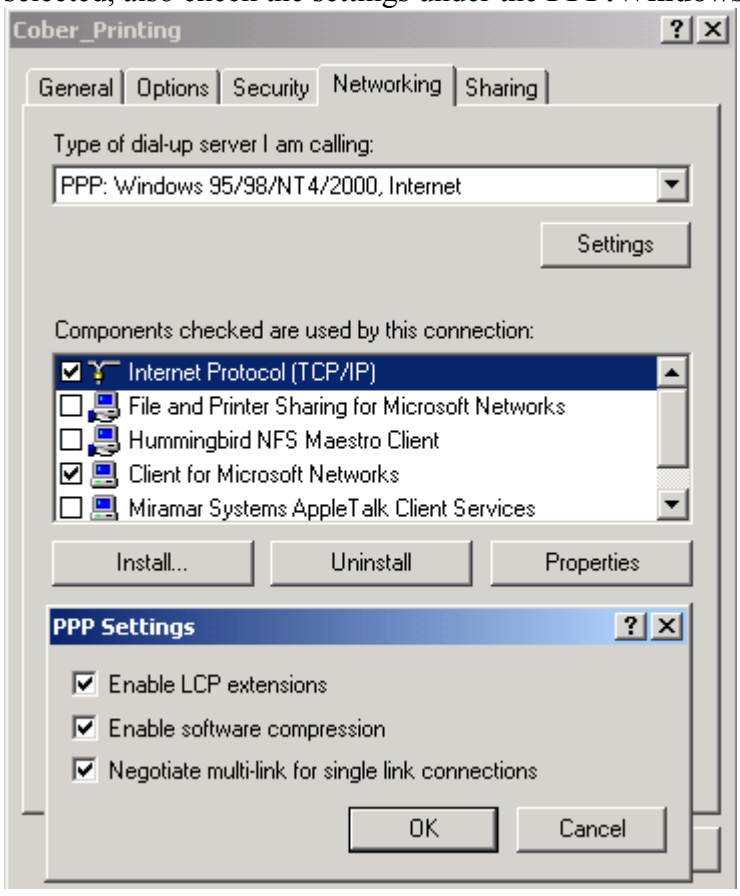


Click O.K, now you're ready to dial.


3.Dial-Up & connecting.

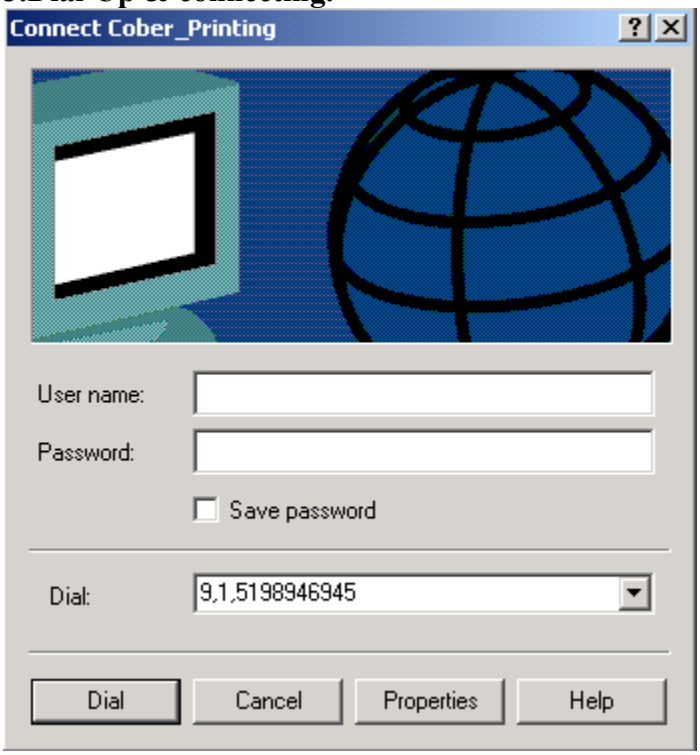

You will be prompted with this black screen, user **ppp** password **sciremote**

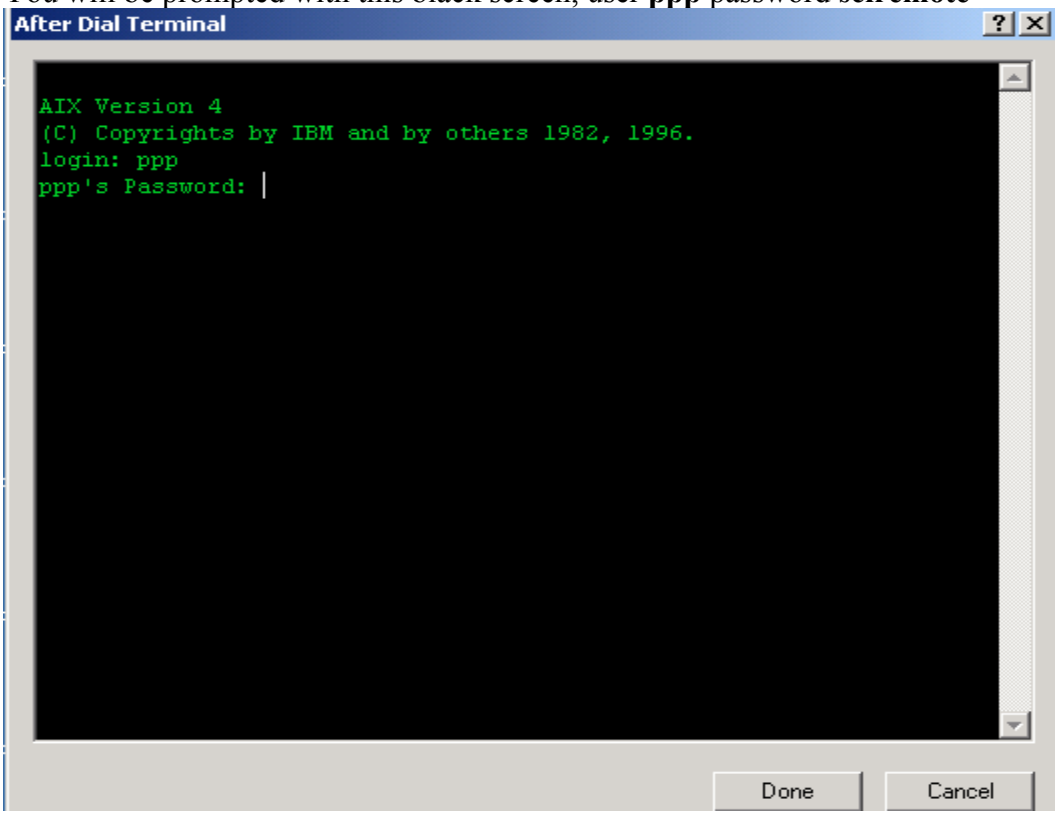

when you see the charcters on the screen , hit the ‘Done’ button & check that you have two networks on your PC

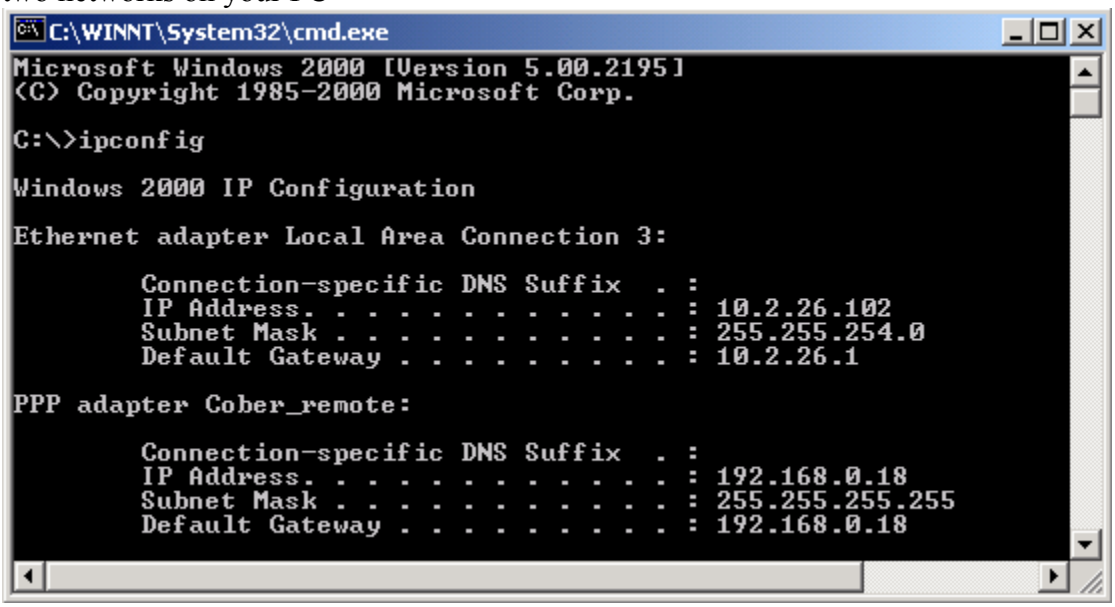

Now you are ready to open a browser on your PC with the correct settings:

