Site Preparation Guide

English

Magnus 400/Magnus 400 Quantum Platesetter

707-00520E Rev B

graphics.kodak.com

Kodak

Copyright



© 2006 Kodak. All rights reserved.

Creo and Magnus are trademarks of Kodak.

Adobe, Acrobat, Adobe Illustrator, Distiller, Photoshop, PostScript, and PageMaker are trademarks of Adobe Systems Incorporated.

Apple, iMac, Power Macintosh, Mac OS, AppleShare, AppleTalk, TrueType, ImageWriter, and LaserWriter are registered trademarks of Apple Computer, Inc. Macintosh is a trademark of Apple Computer, Inc., registered in the U.S.A. and other countries.

PANTONE, Hexachrome, PANTONE Hexachrome, and PANTONE MATCHING SYSTEM are the property of Pantone, Inc.

PEARL, PEARLsetter, PEARLhdp, PEARLdry, and PEARLgold are registered trademarks of Presstek, Inc.

http://graphics.kodak.com/

Internal 707-00520E Rev B

Revised December 2006

Contents

Magnus 400/Magnus 400 Quantum Platesetter Site Preparation Guide 1

Introduction 1
Tools Needed 2
Antivirus Software 2

Equipment Overview 3

Options 4
Size and Weight 4

Site Requirements 5

Footprint and Working Area 5
Universal Debris Removal Cabinet 5
Environmental Conditions 6
Floors 6
Electrical Requirements 7
Power Line Voltage/Frequency 7
Air Supply 9
Air Supply Qualification Procedure 10
Cleanliness 10
Static Electricity 11
Humidity 11
UV Light 11
Air Conditioning 11
Ventilation 12
Telephone Link 13
Network 13
Data Cable Connections 14
Media and Processors 14
Plates 15
Plate Registration 15

Shipment and Delivery 16

Customer Responsibilities 16
Forklift 16
Doors and Hallways 16
Shipping Crates 17

Appendix A: Notice 19

Appendix B: Site Inspection Checklist 21

Magnus 400/Magnus 400 Quantum Platesetter Site Preparation Guide

Introduction

Please take a few moments to read through this document. It provides guidelines for preparing your site for the *Kodak Magnus* 400 platesetter or the *Kodak Magnus* 400 Quantum platesetter installation.

Your Kodak service engineer will help you to ensure that your site meets all the requirements. Proper preparation will help to prevent unnecessary problems and delays when installing the device.

The following topics are discussed:

- Device configuration
- Floor space requirements
- Device dimensions
- Weight requirements
- Electrical requirements
- Universal debris removal system requirements
- Environmental conditions
- Ventilation requirements
- Network/modem requirements
- Processor specifications

With your Kodak service engineer, complete the “Site Inspection Checklist” in Appendix B.

Tools Needed

- Air Supply Tester (92-0373A)—to check the pressure and flow of the site's compressed air supply. See "Air Supply Qualification Procedure" on page 10.
- Measuring tape—15 m (50 ft.)

Antivirus Software



Note: Kodak supports and recommends that the customer purchase a copy of the latest version of *Symantec* AntiVirus Corporate Edition software. They should install it on each of their Kodak CTP Systems. Kodak does not sell *Symantec* AnitiVirus software, nor do we install or directly support it. We recommend that the customer purchase the software from a retail vendor convenient to them. We will supply installation instructions to customers who have signed and returned the Antivirus Waiver to Kodak. To find a copy of the Antivirus Waiver, the customer should log onto the *Kodak eCentral* Internet portal and select **Self Support > Product Documentation** and type the word "Antivirus" in the search criteria.

See the Installing Norton Antivirus document on *eCentral* for installation details.

Equipment Overview



The device consists of the following standard components:

- Plate recording output device
- Debris removal system[1]

1. The debris removal system consists of a vacuum pump and filtration system for removing debris from exposed media. See the Universal Debris Removal Cabinet (UDRC) Site Preparation Guide (725-00089A).

Options

Magnus 400/*Magnus* 400 Quantum platesetter options include:

- Multi-cassette unit (MCU)
- Single-cassette unit (SCU)
- *Kodak Xpo* software
- Chemistry-free plates

Size and Weight

Table 1 shows the maximum dimensions and weight of the *Magnus* 400/*Magnus* 400 Quantum platesetter components. The measurements are taken facing the *Magnus* 400/*Magnus* 400 Quantum platesetter, with the panels installed.

For measurements of the crates as shipped, see Table 3 on page 17.

Table 1: Size and weight of Magnus 400/ Magnus 400 Quantum platesetter

Device	Width	Length	Height	Weight
Platesetter	1760 mm (69.29 in.)	960 mm (37.0 in.)	1340 mm (52.75 in.)	750 kg (1650 lb)
Loading tray		550 mm (21.65 in.)		
Universal Debris Removal Cabinet (UDRC)	See the Universal Debris Removal Cabinet (UDRC) Site Preparation Guide (725-00089A).			
Workstation	Varies with configuration			
Optional Equipment				
MCU	1210 mm (47.63 in.)	1600 mm (63 in.)	1340 mm (52.75 in.)	650 kg (1431 lb)
Platesetter with MCU/SCU	1760 mm (69.29 in.)	2400 mm (94.48 in.)	1340 mm (52.75 in.)	1400 kg (3080 lb)

Site Requirements

Footprint and Working Area

Ask your service representative to look on TechPlanet for the recommended work area and dimensions for your specific *Magnus* 400/*Magnus* 400 Quantum platesetter configuration.

Allow a recommended minimum 1200 mm (47.24 in.) at the front of the device, and 1000 mm (39.37 in.) at the sides of the device for operator access.

Provide an area close to the device for storing media (for immediate use), disks, paperwork, and so on.

Universal Debris Removal Cabinet

Certain printing media (plates or film) may release airborne emissions during the imaging process. Kodak output devices are supplied with—or you may be able to add—a debris removal system, containing a collection nozzle located on the head and a filtration unit such as the UDRC.



WARNING: Emissions, either particulate or gaseous, that are not properly filtered can endanger your health. For a list of airborne emissions that pertain to the media you are using, see the media Material Safety Data Sheet (MSDS) or contact the media manufacturer or distributor directly.

The debris removal system is designed to extract and filter the airborne emissions, thus contributing to a healthier working environment, consistent image quality, and general reliability and cleanliness of the imaging device. Some types of media typically release both particulate and gaseous emissions. Other types of media, under certain imaging conditions, may release largely particulate emissions.



WARNING: Filtration of airborne emissions is not 100 percent efficient and must be complemented by adequate outdoor air room ventilation. Failure to ensure adequate ventilation may result in exposure to airborne emissions in excess of applicable regulatory limits and in possible discomfort, illness, injury, and/or disability.

The UDRC configuration may include various filter options tailored to suit specific qualified media types. The configuration for a particular customer site is typically specified in a Kodak proposal, sales agreement, order form, product specification, or equivalent document.

The cabinet must be located within the cable and hose limitations.

For more information about the debris removal cabinet, see the Universal Debris Removal Cabinet (UDRC) Site Preparation Guide (725-00089A).

Environmental Conditions

Install the system in a clean prepress area wherever possible. It is not advisable to install the device in a pressroom environment.

The operating environment for the *Magnus* 400/*Magnus* 400 Quantum platesetters must be:

Temperature 20°–30°C (68°–86°F)

Humidity 40%–60% RH, non-condensing



Note: Some media types may restrict the operating environment of the *Magnus* 400/*Magnus* 400 Quantum platesetters. Consult the media manufacturer for the recommended temperature and humidity ranges for plate operation and storage.

For the UDRC operating environment, see the Universal Debris Removal Cabinet (UDRC) Site Preparation Guide (725-00089A).

Floors

The floor must be level and not subject to high levels of vibration. If the customer site is close to heavy car traffic or rail traffic routes, or is near an industrial site, the device may be exposed to high levels of vibration through the floor.

Electrical Requirements

The dedicated branch circuit for the following components must be supplied with the same AC supply panel to ensure that all branch circuits are at the same ground potential:

- Output device main power
- Debris removal system main power
- Workstation main power

Power Line Voltage/Frequency



Note: A certified electrician should perform all power connections.

The *Magnus* 400 platesetter rated voltage is 190 V–264 V.

Two configurations are available for the *Magnus* 400/*Magnus* 400 Quantum platesetters—one for 60 Hz and one for 50 Hz.

Countries With 60 Hz Output

- Rated voltage of 208 Vac (-6%+10%) 60 Hz ± 1.5%

Countries With 50 Hz Output

- Rated voltage of 230 Vac ± 10% 50 Hz ± 1.5%

If there are concerns about power quality (blackouts or brownouts) at the customer site, an online uninterruptible power supply (UPS) can be purchased from a local supplier. A UPS allows a correct, complete shutdown of the device. (A line conditioner allows the device to function for extended periods of time when the power conditions are outside of the *Magnus* 400 specifications.)

Circuit Breaker

The circuit breaker on the wall should be 20 A.

Power Consumption

When the platesetter is in standby mode, the maximum power consumption is approximately:


- *Magnus* 400 Quantum at standby, 1.1 kwh
- *Magnus* 400 Quantum at expose, 1.8 kwh
- *Magnus* 400 at standby, 1.2 kwh
- *Magnus* 400 at expose, 2.2 kwh

Inrush Current

The inrush current is approximately 27 A for five seconds.

Plug

The type of power cord plug used on the *Magnus* 400 platesetter is a two-pole, three-wire, 250 V, 32 A, 6HOUR plug (6HOUR refers to the orientation of the ground connection).

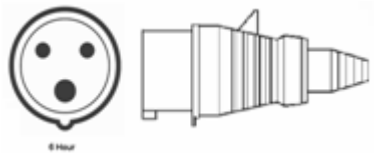

IEC-309, two-pole, three-wire, 250 V, 32 A, 6HOUR connector supplied with power cable



IEC-309, two-pole, three-wire, 250 V, 32 A, 6HOUR receptacle

Power Line Disturbances

The reliable operation of computer systems depends on the availability of relatively noise-free AC power. Lightning, line faults, or power switching that are commonly found in machinery, office equipment, or factory environments can generate line transients, which exceed the peak value of the applied voltage. If not attenuated, these microsecond pulses can disrupt system operation. The power line to the platesetter should be oriented away from electrically noisy power cables. If power line disturbances are affecting the operation of the platesetter, the use of a power stabilizer is highly recommended.

Dips in power should not exceed 30 percent of the nominal voltage with a maximal duration of 10 ms. Fast transient disturbances on the power line should not exceed 1.0 kV.

Debris Removal Cabinet Power

For more information about the debris removal cabinet, see the Universal Debris Removal Cabinet (UDRC) Site Preparation Guide (725-00089A).

Note: Kodak America has a contract with Rx Monitoring Services in Manchester, NH to provide power and environmental site surveys for the NAFTA region. The monitoring service includes voltage, current, temperature, humidity, dust, and air pressure.
Rx Monitoring Services will provide the equipment to be installed at the customer site for a maximum of 10 days. They will then monitor it and send a report via e-mail. Outside North America, contact your local product support specialist.

Air Supply

The *Magnus* 400/*Magnus* 400 Quantum platesetters require a clean, dry, *oil-free, dust-free, and moisture-free* air supply at 7 bar (100 psi) of shop air according to the following table:

Configuration	Average Air Consumption[a]	Compressor Air Supply[a]
Magnus 400/*Magnus* 400 Quantum platesetter	10 SLPM (0.35 SCFM)	70 SLPM (2.47 SCFM)
Magnus 400/*Magnus* 400 Quantum platesetter with MCU	90 SLPM (3.18 SCFM)	170 SLPM (6.0 SCFM)

[a]SLPM measured at 7 bar; SCFM measured at 100 psi

A standard .25-in. BSP port female outlet connector is required. It should be mounted on the wall up to 5 m from the device.

The air supply should conform to ISO class 4.

- Maximum particle size 15 µ (0.006 in.)
- Concentration of solid contaminants: 8 mg/m^3 (0.000216 oz./$yd.^3$)
- Maximum pressure dew point 3°C @ 8 bar (37.4°F @120 psi)
- Maximum oil content 5 mg/m^3 (0.000135 oz./$yd.^3$)



Note: Do not add lubricant.



Note: The temperature of the air line going from the drying device to the machine must be kept above 3°C.

Examples of typical compressed air systems that you may use:

For Magnus 400/Magnus 400 Quantum platesetter

Manufacturer	Compressor Type	Compressor Model	Air Receiver (liter)	Dryer (230 V-AC)	Automatic Water Drainer
Kaeser	Piston	Premium-Silant 130/10	10	TAH-4	According to air receiver
Atlas Copco	Piston	LFx-1.0-T20	50	FX1	According to air receiver

For Magnus 400/Magnus 400 Quantum platesetters with MCU

Manufacturer	Compressor Type	Compressor Model	Air Receiver (liter)	Dryer (230 V-AC)	Automatic Water Drainer
Kaeser	Screw	SX-3	250 (or 280)	TA-5	ECO-21-PLUS
Atlas Copco	Screw	GX2-10 (50 Hz)	250	FX1	WD80

Air Supply Qualification Procedure

This procedure helps determine whether the customer's air supply is adequate for satisfactorily running the output device. It requires a measurement tool (92-0373A) made specifically to test the output device's air supply.

1. Mount the device to the end of the air hose or pipe that would normally be connected to the output device. A few extra adapter fittings and a roll of *Teflon* tape have been included for this purpose.
2. Turn on the valve on the tool.
3. Record the results in the table on page 29.
4. Repeat this test two more times during the day at well-spaced intervals to confirm that the air supply is not being compromised by other machines.

The gauge must never fall below 90 psi at any time during the tests. If the air supply fails to maintain this pressure at a minimum, it is below specifications for the output device.

Cleanliness

Filters in the air conditioning system should be able to block 60 percent of all 10-micron dust particles.

Clean air is vital because an unclean environment can cause hotspots on your plates, as well as machine malfunction.

According to IEC-721-3-3,7

Name: Mechanically active substances

Class: 3S2, 7S1

Severity: Sand 30 mg/m^3

- Dust (suspension) 0.2 mg/m^3
- Dust (sedimentation) 1.5 mg / (m^2 X h)

Static Electricity

- Humidity must be 40 percent–60 percent to reduce the static electricity with the plates. See "Humidity" in the following section.
- Use of floor carpeting is not recommended in the *Magnus* 400/*Magnus* 400 Quantum platesetter area. If carpets are used, only antistatic carpets should be installed at the site. Carpet thickness should be 12 mm (.5 in.).

Humidity

The platesetter requires relative humidity of 40 percent–60 percent. An industrial steam humidifier can be used to meet specified humidity.

UV Light

Some plates, such as *Kodak* DITP, are sensitive to UV light. When such plates are used or when the *Magnus* 400/*Magnus* 400 Quantum platesetter is directly connected to a plate stacker, you need an appropriate safe light.

Air Conditioning

Sufficient air conditioning should be present to provide heat dissipation for the platesetter, plus all additional equipment residing in the system room, and an additional minimum 25 percent safety margin. Ensure that the ventilation system can circulate the entire volume of air in the room 16 times per hour.

The platesetter requires a constant temperature of 20°–30°C (68°–86°F).

The calculated air conditioning requirements for the platesetter (in BTU/hour) are shown in the following table.

Platesetter	12,000–16,000 BTU/hour
Host	2,500 BTU/hour
Debris removal system	4,800 BTU/hour
Other miscellaneous	1,500 BTU/hour
Safety margin (25% of above)	6,250 BTU/hour
Total	27,050–31,050 BTU/hour

Please note the following guidelines:

- The system room should ideally contain both a thermometer and a hygrometer, permanently mounted in a central location.
- In addition, it is highly recommended that you have a humidity and temperature recorder.

Ventilation

No filtration can be 100 percent efficient (for example, carbon monoxide is not captured by filters). That is why outdoor air ventilation is required with the debris removal system. Air exhaust vents (where air is drawn out of the room) should be located as close to the debris removal cabinet and output device as possible.

The *Magnus* 400/*Magnus* 400 Quantum platesetters require a minimum of 1.1 m^3/min (40 cfm)[1] outdoor air ventilation. This air ventilation prevents the accumulation of airborne emissions that may be released when certain media are imaged.[2]

Outdoor air ventilation must not be confused with air circulation in the room that results from temperature control or humidity control. Outdoor air ventilation may be roughly estimated to be 10 percent to 30 percent of the air circulation rate in the room. To achieve adequate air mixing, Kodak recommends at least three ACH (air changes per hour).

These recommendations apply to a single device with no other equipment in the room. Other imaging equipment, processors, ovens, HVAC systems, and so on, may contribute additional emissions to the work environment, increasing the amount of outdoor air ventilation required.

The customer is responsible for assessing the level of airborne emissions in the room to ensure that, upon installation of the *Magnus* 400/*Magnus* 400 Quantum platesetters, the requirements of local, state, provincial, regional, and national regulations for occupational health and safety are satisfied. In the event of any uncertainty about the levels of airborne emissions, the customer should arrange for a qualified industrial hygienist to conduct an indoor air quality assessment.

1. This is a default value. Certain media may require higher ventilation. To check the recommended value for specific media, see the CTP Media Imaging Performance Database (available from your Kodak representative). A recommended ventilation will be specified if the value for a media is different than the default.
2. Information about the hazardous compounds released by a particular media during imaging should be available from the media manufacturer's MSDS or equivalent document.

Telephone Link

The customer must maintain a direct-dial analog telephone line that is dedicated to the workstation (no other devices sharing this line) for use with Kodak dial-in support. The customer should also provide a separate voice phone line to the output device location for communication with Kodak service representatives during dial-in support.

Use a dedicated telephone line and an RJ-11 cable to plug into the modem. The RJ-11 cable must be long enough to reach the workstation.



Note: Remote dial-in support to the output device is dependent upon a dedicated, direct dial-in telephone line. Kodak can offer remote support only for machines that do not share telephone lines with other equipment.

Network

The customer must provide a Local Area Network (LAN) connection to the output device to supply files from the workstation.

Table 2: Network connections

Connections	Supplied by Kodak	Supplied by Customer
Network connection for connecting the *Magnus* Controller workstation to the workflow network	Ethernet: 1000 Base T/ 100 Base-T (RJ-45)	Network connection and cable must be long enough to reach the *Magnus* Controller workstation. We recommend a 15-m (49-ft.) cable.

Data Cable Connections

Connect the data communication cables on the *Magnus* 400/*Magnus* 400 Quantum platesetters as follows:

- ***Magnus* 400 with *Xpo* software (for connection with *Kodak Prinergy*, *Kodak Prinergy* Evo, and *Kodak* PS/M software)**
  - ❒ Standard Ethernet J45 cable for direct TCP/IP connection
  - ❒ TSP 75 (in the *Magnus* Controller) indirect connection using 1-bit TIFF files
- ***Magnus* 400 (for connection with *Kodak Brisque* software)**
  - ❒ Standard Ethernet J45 cable for direct TCP/IP connection
  - ❒ TSP 75 (in the Brisque platform) direct connection
  - ❒ SCSI cable connection (199D20025A)
- ***Magnus* 400 Quantum (for connection with *Prinergy* or *Prinergy* Evo software)**
  - ❒ SCSI cable connection (16-3503)



Note: The standard SCSI cable supplied by Kodak is 7.6 m (25 ft.).

If a greater distance between the workstation and the output device is required, the following optional configurations are available:

- 15.2-m (50-ft.) cables and a SCSI booster
- 30.4-m (100-ft.) cables and SCSI boosters

  - ❒ Standard Ethernet J45 cable for direct TCP/IP connection
- ***Magnus* 400 Quantum (for connection with *Brisque* software)**
  - ❒ Standard Ethernet J45 cable for direct TCP/IP connection
  - ❒ TSP 75 (in the Brisque platform) direct connection
  - ❒ SCSI cable connection (199D2002)



For more information about *Prinergy* Evo software connectivity, *Brisque* software connectivity, and PS/M software connectivity, on TechPlanet, see the Connectivity information for the relevant output device.

Media and Processors

The processor specifications may vary and depend on the specific processor used at the customer's site. The processor vendor should provide the relevant information.

Plates

- The *Magnus* 400/*Magnus* 400 Quantum platesetters support thermal plates that are sensitive to IR 830-nm wavelength.
- Storage room for plates—consult the plate vendor for the recommended humidity and temperature ranges in which the plates should be stored.
- Consult your vendor regarding a plate densitometer that is adequate for thermal media.

Plate Registration

For optimal registration, the reference points used by the output device should also be used by plate bending and punching equipment. See Figure 1 for the plate registration points.

The customer is responsible for satisfying the requirements for achieving optimal plate registration on press.

For further assistance on specifying punches and benders to be used with the *Magnus* 400/*Magnus* 400 Quantum platesetters, contact a Kodak service representative.

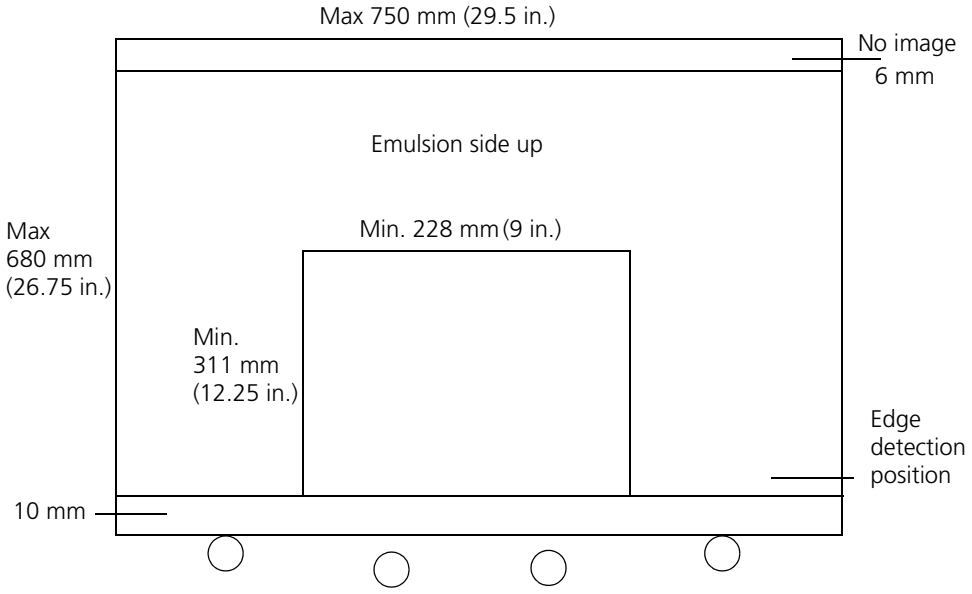


Figure 1: Plate registration points

Shipment and Delivery

Customer Responsibilities

The customer is responsible for providing Kodak with delivery instructions. The customer is also responsible for transporting the shipping crates to the installation location and for unloading them at the site. However, the customer must not unpack the shipping crates. Kodak recommends that the customer use professional riggers to unload the crates from the transport vehicle. Dock level is required (a vertical distance from ground to dock of 1.2 m [4 ft.]), and the ability to handle a 15.9-m (53-ft.) trailer.

Kodak engineers will unpack the shipping crates and install the device.

Forklift

The customer must provide a forklift or crane with a minimum 1,365-kg (3,000-lb) capacity for unloading the equipment. The width of the forks must not exceed 15 cm (6 in.) and the span should be 51 cm (20 in.).

Doors and Hallways

The customer must provide free access through doors and hallways from the entrance to the device location so that the whole pallets can be transported to the installation location. Kodak recommends that the customer furnish a drawing of the route. For maximum crate dimensions, see *"Shipping Crates" on page 17*.



Note: Walk the entire route from the loading dock to the installation area. Measure all doorways, openings and aisles to ensure that there is adequate space to move all of the components safely.

Shipping Crates

The output device is normally shipped in one to three crates, depending on the options ordered. Table 3 lists the individual dimensions (L×W×H) and weights of the crates.

Table 3: Dimensions and weights of crates

Crate Contents	Length	Width	Height	Weight
Magnus 400/*Magnus* 400 Quantum platesetter	2065 mm (81.3 in.)	1145 mm (45.08 in.)	1600 mm (63 in.)	750 kg (1650 lb)
MCU	1830 mm (72.05 in.)	1400 mm (55.12 in.)	1470 mm (57.87 in.)	650 kg (1430 lb)
Workstation	Varies with configuration			
Debris removal cabinet	See the Universal Debris Removal Cabinet (UDRC) Site Preparation Guide (725-00089A).			

A

Notice

The imaging of some media may result in airborne emissions. This notice is intended to provide general information relating to these emissions only. For information specific to particular media, please see the media manufacturer's MSDS or other documentation.

The by-products of the imaging of printing media may include one or more of: aldehydes (formaldehyde, acetaldehyde); oxides (nitrogen dioxide, nitric oxide, carbon monoxide); volatile organic compounds and olefins (benzene, 1,3-butadiene); other gaseous compounds (hydrogen cyanide, and so on); and particulate matter (dust). This list is not comprehensive, and other compounds may be present in the emissions, depending on particular media.

To help prevent contamination and to improve reliability of imaging, the Kodak output device may include a debris removal system containing a filtration unit, either internal or external (for example, a universal debris removal cabinet), corresponding to qualified media used at a particular site. Depending on the configuration of the filtration unit, the unit may trap dust only (for example, UDRC-BP), or it may trap dust and a number of gaseous by-products of the imaging process (for example, UDRC-LC). It is critical to change the filters in the filtration unit on a regular basis.

Not all emissions can be efficiently captured by filtration. Sufficient outdoor air ventilation must be provided in rooms where Kodak output devices and filtration units are located. The requirements for the ventilation rate are contained in either the output device Site Preparations and Requirements document or another applicable document.

Kodak cannot assure occupational safety under all operational conditions because of factors that are outside the control or knowledge of Kodak. These factors include, but are not limited to:

- Inadequate air ventilation or poor air mixing in the imaging room, which may cause higher than expected emissions concentrations in all or parts of the room
- Imaging of media that were not qualified or preapproved by Kodak; in particular, media not qualified for use with a debris removal system or a filtration unit specified in the Kodak Sales Agreement, Customer Agreement, Order Form, Service Agreement, Output Device Configuration, or similar applicable document
- Changes to the qualified printing media formulation or manufacturing process made by the media manufacturer after qualification, resulting in emissions changes (this may cause different or greater emissions than expected)
- Incorrect or incomplete specification of potential emissions to Kodak by the media manufacturer, which may cause different or greater emissions than expected
- Combined action of airborne emissions from multiple compounds, which may—through cumulative or synergistic effects—cause greater than expected effects on human health
- Airborne emissions from other sources combining with the imaging system's emissions to exceed occupational health regulations or having cumulative effects on human health greater than those expected for individual emissions
- Variation in individual sensitivity to airborne emissions that may cause greater effects in susceptible individuals
- Tampering with, misuse of, or incorrect maintenance of imaging equipment or emissions safety systems, which may cause additional emissions to occur
- Noncompliance with instructions in user guides, warning labels, site preparation, or other Kodak documents, which may cause excessive emissions levels
- Changes in occupational health regulations or industrial hygiene practices that may result in a system that is considered safe upon original installation, but is found to be unsafe at a later date.

Because of variables such as those listed above, many of which are in the control of the end user or the media manufacturers, Kodak cannot warrant that, under all imaging system installations and operating conditions, including the use of a filtration unit, and with all media types, media will not release emissions while being imaged that an operator or other persons may find objectionable or may claim to be injurious. Kodak'S ONLY WARRANTY AND LIABILITY, IF ANY, SHALL BE AS PROVIDED UNDER ITS STANDARD TERMS OF SALE OR CUSTOMER AGREEMENT, AS APPLICABLE. Neither this notice nor the Site Preparations and Requirements document or other similar document is a promise or guarantee of a particular level of performance, and neither this notice nor the Site Preparations and Requirements document or other similar document is a warranty of any kind whatsoever. It is the end user's responsibility to ensure continuing compliance with all Occupational Health and Safety regulations and guidelines in its work environment.

B

Site Inspection Checklist

Full completion of this checklist will greatly assist in building, delivering, and installing the *Magnus* 400/*Magnus* 400 Quantum platesetter and all its accessories.

Site Information

Company name: _____

Site address:

Shipping address:

Contact Information

Contact name: _____

Position: _____

Telephone/fax: _____

E-mail: _____

Prepress manager: _____

Maintenance manager: _____

Network manager: _____

Note: All operators must be capable of running a personal computer with a *Microsoft Windows* operating system. If more than four operators are to be trained, an extra day will be required after the installation.

Machine Usage

Number of shifts per day: _____

Shift 1 hours: _____

Shift 2 hours: _____

Shift 3 hours: _____

Shift 4 hours: _____

Media Supported

List all plate types and sizes to be used for each device.

Measurements are in:

☐ mm ☐ in.

Media Type[a, b]	Plate Size	Average # of Plates per Day	Average Length of Press Run	Type of Work (four-color; spot color; halftones; Staccato; text only)

a. Kodak-approved media only. Imaging speed can be affected if media sensitivity or processing is inconsistent with Kodak's qualification testing. Contact your Kodak representative for specific media information.

b. Some plates may restrict the operating environment of the system. Consult the plate manufacturer for their recommended temperature and humidity ranges for plate operation and storage.

Is a plate punch to be used?

☐ Yes ☐ No

Punch name and model: _____

Installation date: _____

Comments on punch condition:

Is a plate bender to be used?

☐ Yes ☐ No

Plate bender name and model: _____

Are the registration points of the plate bender and punch the same as those of the device?

☐ Yes ☐ No

Comments:

Presses Supported

Press name and model: _____

Processor Supported

Processor name and model: _____

Delivery date: _____

Has the customer met the power and plumbing requirements for the processor?

☐ Yes ☐ No

Comments:

Other Kodak Equipment On Site

Are any other Kodak products already installed?

☐ Yes ☐ No

Comments:

Will Kodak be installing other new equipment during the installation of the *Magnus* 400/*Magnus* 400 Quantum Platesetter?

☐ Yes ☐ No

If yes, what will be installed?	When?	Who at Kodak is doing the install?

Configuration

Which autoloader option was ordered?

☐ Single-cassette unit ☐ Multiple-cassette unit (3)

Site Requirements



Note: Install the device in a clean prepress area.

1. Is sufficient area available for the device? Measure the available space at the site location.

   ☐ Yes ☐ No

   Comments:

2. Is the working area free from support beams or other obstacles?

   ☐ Yes ☐ No

   Comments:

3. Does the customer know that they are responsible for transporting shipping crates from their shipping dock to the installation area?

   ☐ Yes ☐ No

4. Does the forklift to be used meet requirements? (See "Forklift" on page 16.)

   ☐ Yes ☐ No

5. Do the doors and hallways between the shipping dock and the installation area have sufficient space to allow passage of the shipping crates? (See "Doors and Hallways" on page 16.)

   ☐ Yes ☐ No

   Comments:

6. Can the receiving area accommodate a typical air ride truck—that is, does it have a dock level? (See "Shipment and Delivery" on page 16.)

☐ Yes ☐ No

Comments:

7. Will the room's humidity control system be able to handle the moisture load generated by the processor line?

☐ Yes ☐ No

Comments:

8. Is the installation area flat according to the required specification? (See "Floors" on page 6.)

☐ Yes ☐ No

Comments:

9. Does the floor meet the maximum peak loading specification? (See "Floors" on page 6.)

☐ Yes ☐ No

Comments:

10. What are the AC mains voltages?

AC mains voltage for workstation: _____

AC mains voltage for device: _____

11. Is power conditioning required?

☐ Yes ☐ No

If yes, has a line conditioner been ordered?

☐ Yes ☐ No

12. Is UPS required?

☐ Yes ☐ No

If yes, has the UPS been ordered?

☐ Yes ☐ No

13. Is a 20-A service (16-A in Europe) with a slow-blow fuse or breaker installed, and a dedicated ground for the device?

☐ Yes ☐ No

Comments:

14. Is the AC service for the workstation installed and originating from the same supply panel as the device AC service?

☐ Yes ☐ No

Comments:

15. Does the air supply flow (tested using air supply gauge 92-0373A) meet specifications? (See the "Air Supply Qualification Procedure" on page 10.)

☐ Yes ☐ No

Record the test results in the following tables.

Air Supply Qualification Test Results

Part number of measurement tool: _____

First Test	
Time On	Pressure
10 Sec	
20 Sec	
30 Sec	
40 Sec	
50 Sec	
60 Sec	

Second Test	
Time On	Pressure
10 Sec	
20 Sec	
30 Sec	
40 Sec	
50 Sec	
60 Sec	

Third Test	
Time On	Pressure
10 Sec	
20 Sec	
30 Sec	
40 Sec	
50 Sec	
60 Sec	

16. Is the air supply filtered and dried as per specification? (See "Air Supply" on page 9.)

☐ Yes ☐ No ☐ Prefilter ordered

Comments:

17. Are the voice and data telephone lines installed?

☐ Yes ☐ No Modem number: _____

Comments:

18. What type of network connection is used?

_____

Follow-Up

Is follow-up required?

☐ No The location described in this document meets all criteria for a timely and successful installation of the *Magnus* 400/*Magnus* 400 Quantum platesetter.

☐ Yes Some follow-up is required to ensure that the site requirements are met **prior** to the installation of the device.

The outstanding items from the Site Requirements list are:

Name of customer contact: _____

Telephone/fax: _____

E-mail: _____

Date of next follow-up contact: _____

Site Inspection Completed

The presite inspection was performed on _____ by a representative of Kodak and witnessed by at least one representative of the customer.

Kodak representative: _____

Signature: _____

☐ The Customer understands and hereby agrees to the requirements outlined in the Universal Debris Removal Cabinet Site Preparations and Requirements document (725-00089A), including any appendix attached thereto, as acknowledged by the Customer's signature herein or, alternatively, by the customer's signature on a Kodak Sales Agreement, Customer Agreement, Service Agreement, Order Form, or similar applicable document.

Customer representative: _____

Signature: _____