Kodak

# Magnus VLF

## Unload Table Panel Upgrade

**Document Number**
**719-00773A-A**

06 Dec 2006

Copyright 2006 Kodak. All rights reserved.

Kodak

# Magnus VLF
# Unload Table Panel Upgrade

## 1. OVERVIEW

The new recessed plastic plate supports improve the unloading of certain size plates. This is done by eliminating the corner where the plates got stuck. The elimination of that corner also improves plate shuffle and increases the plate eject reliability.

**Note:** If you are upgrading the center panel, the device will not longer have the plate rotator upgrade capability.

## 2. PARTS/TOOLS

Parts:


- Complete upgrade kit – 512-00402A
- Side panels only upgrade kit – 512-00403A

Tools:

- Drill
- Metric hex keys

## 3. UPGRADING THE PANELS

1. Remove the old unload table panels.
2. Place the new side panels in position and pull the panel as far towards yourself as possible.
3. Locate the slot with the missing plastic plate support, see diagram below and put a center mark on the aluminum support below at the middle of the slot, as shown. Note: One hole on each side panel.

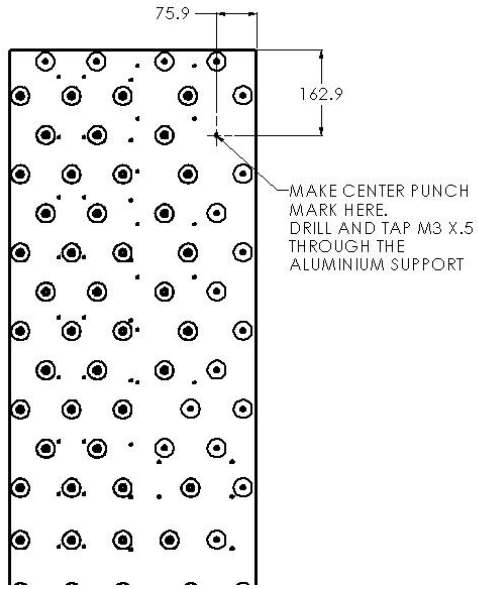


4. Remove the side panels.
5. Using the drill provided, drill through the thickness of the aluminum beam. Carefully remove the shavings so they do not fall on the load table.
6. Tap the holes using the M3 x 0.5 tap provided.
7. Install the side panels and bolt them down using the loose plastic supports and M3 bolts and washers provided.
8. If you are upgrading the side panels only, then you are done. If you are upgrading the complete unload table panel set, then install the three wide panels and two narrow panels.