FCO 512-00416A

Installing Creo Feature Licensing Server

Document number: 719-00793A Rev B

Applies to:

- Kodak® Lotem® 800 II family platesetters

Priority: Next visit

Description

The Creo Feature Licensing (CFL) Server is an integrated feature license management system that provides feature control management for multiple applications. Its purpose is to:

- Protect Kodak device features in a flexible, consistent, and secure manner
- Protect the value of Kodak service tools

Important: The CFL is shipped with Kodak Lotem Controller software version 3.82.

Time required: 1 hour

Prerequisites:

- Lotem Controller software versions 3.75.09 or 3.80.16.
- Sevice dongle
- Service Shell 2.6 SP2
- Microsoft® Windows® 2000 operating system


Parts included in FCO:

Part Number	Part Name	Quantity
651-00688A	Kodak Feature Licensing Server CD	1
651-00689A	FCO Updater utility for Creo Feature (CFL) CD	1
719-00793A	FCO document	1

Procedure


Important: This FCO can only be installed if the engineer has a sevice dongle.

1. Insert the **Kodak Feature Licensing Server CD** (for Lotem Controller Win 2K) into the CD-ROM drive.
2. In Microsoft® Windows® Explorer, locate the contents of the **Kodak Feature Licensing Server CD**.
3. Install **.Net Framework for Microsoft Windows 2000**.
   a. Double-click **Win2000_dotnetfx1.01.exe**.

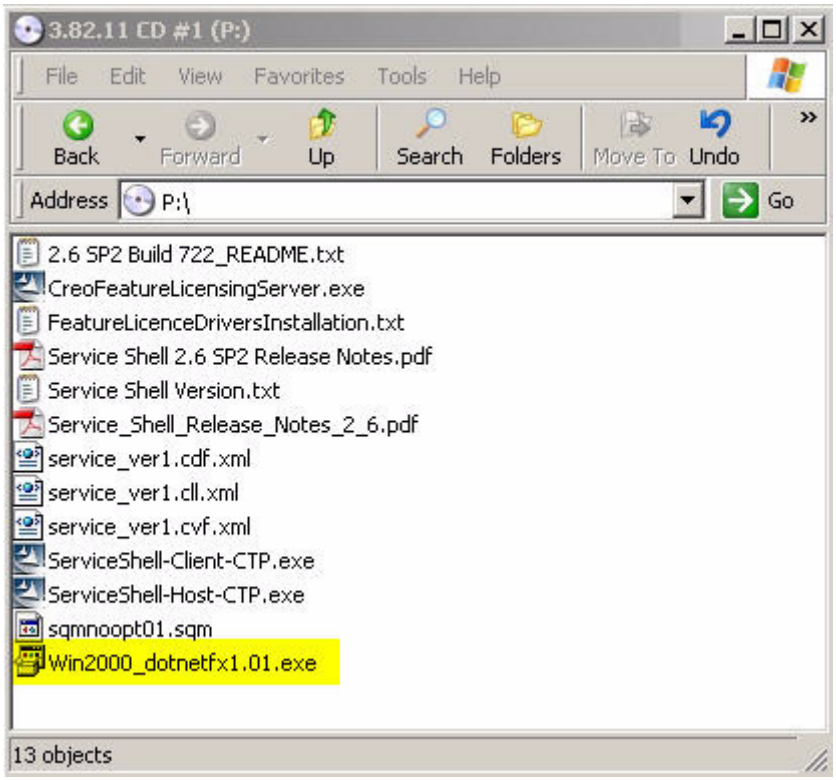


   b. Complete the installation wizard.


4. Install the **Creo Feature Licensing Server** software.
   a. In Windows Explorer, locate the contents of the **Kodak Feature Licensing Server CD** (for Lotem Controller Win 2K).
   b. Double-click **CreoFeatureLicensingServer.exe** to start the InstallShield Wizard for Creo Feature Licensing Server.

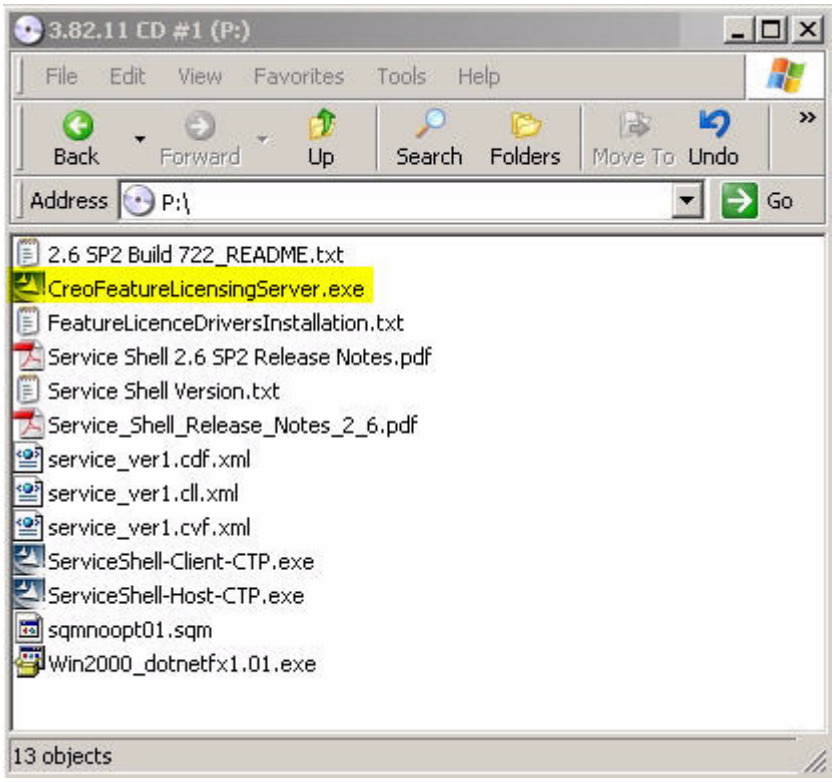



c. Follow the on-screen instructions to complete the software installation process.


Important: When prompted to restart the computer, click **No**.

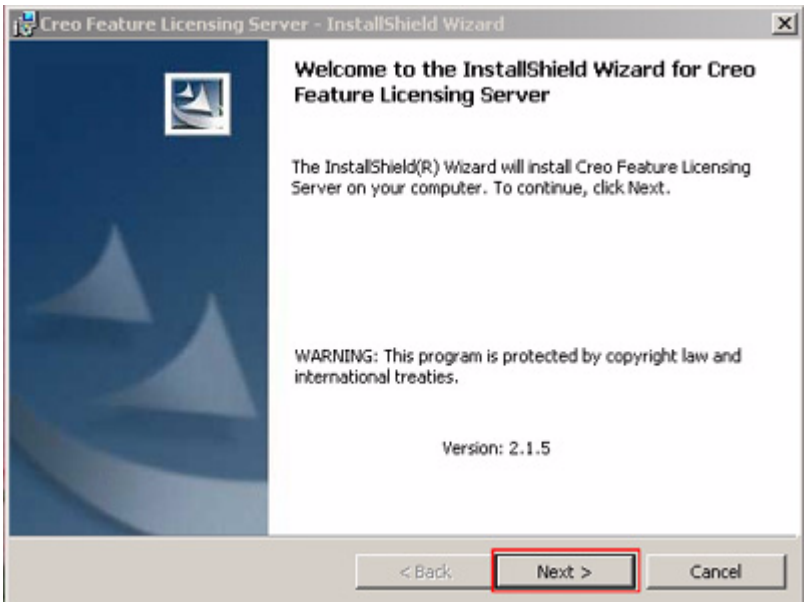

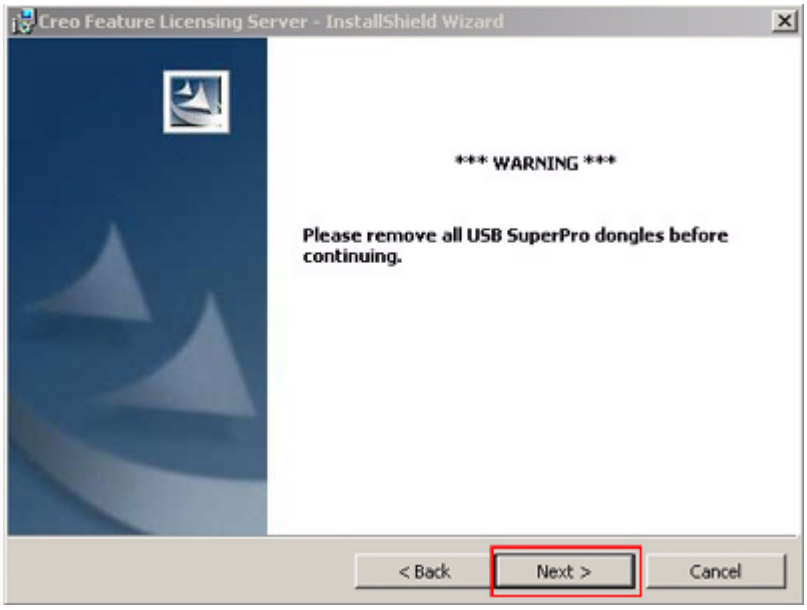


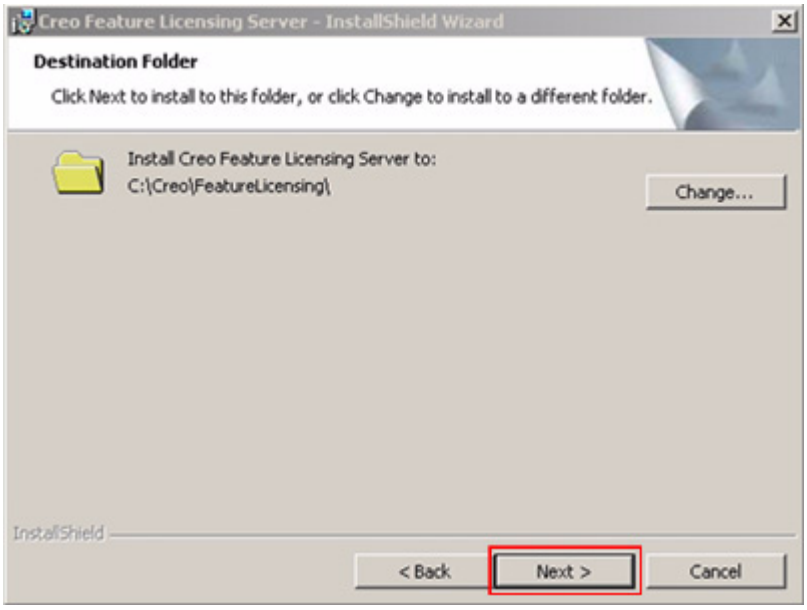
Creo Feature Licensing Server - InstallShield Wizard
Destination Folder
Click Next to install to this folder, or click Change to install to a different folder.
Install Creo Feature Licensing Server to:
C:\Creo\FeatureLicensing\
Change...
InstallShield
< Back
Next >
Cancel

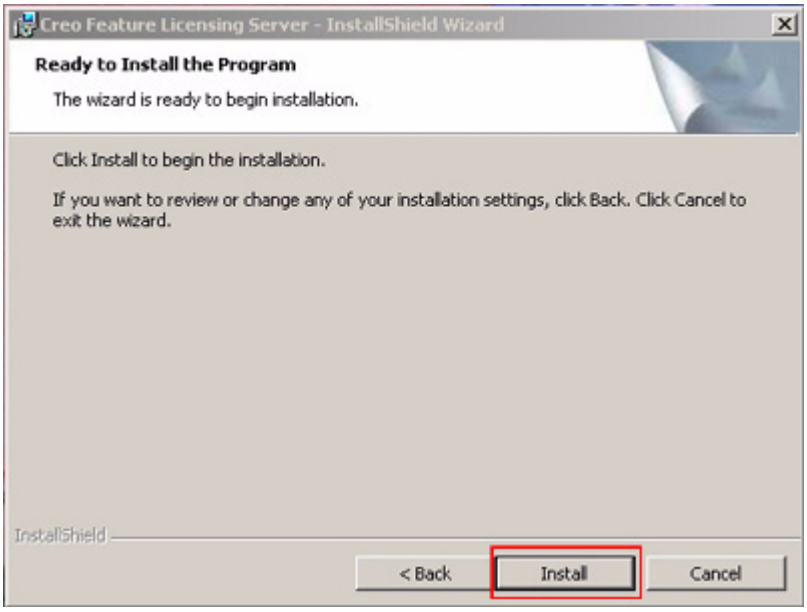

Creo Feature Licensing Server - InstallShield Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

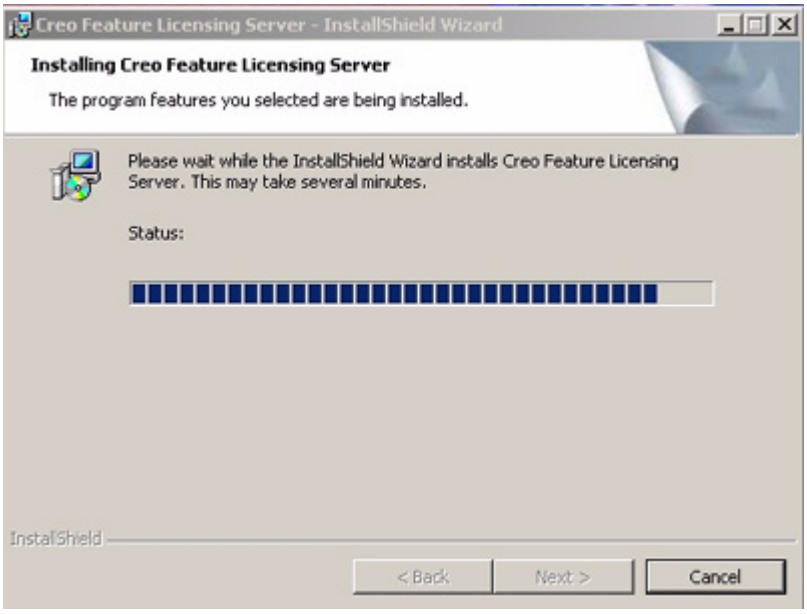

Important: When prompted to restart the computer, click **No**.

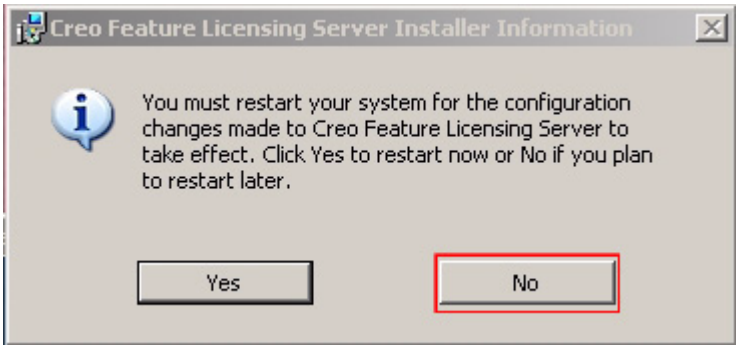


5. Locate the contents of the **Kodak Feature Licensing Server CD** (for Lotem Controller Win 2K), and copy the following xml files:
   - **service_ver1.cdf.xml**
   - **service_ver1.cll.xml**
   - **service_ver1.cvf.xml**

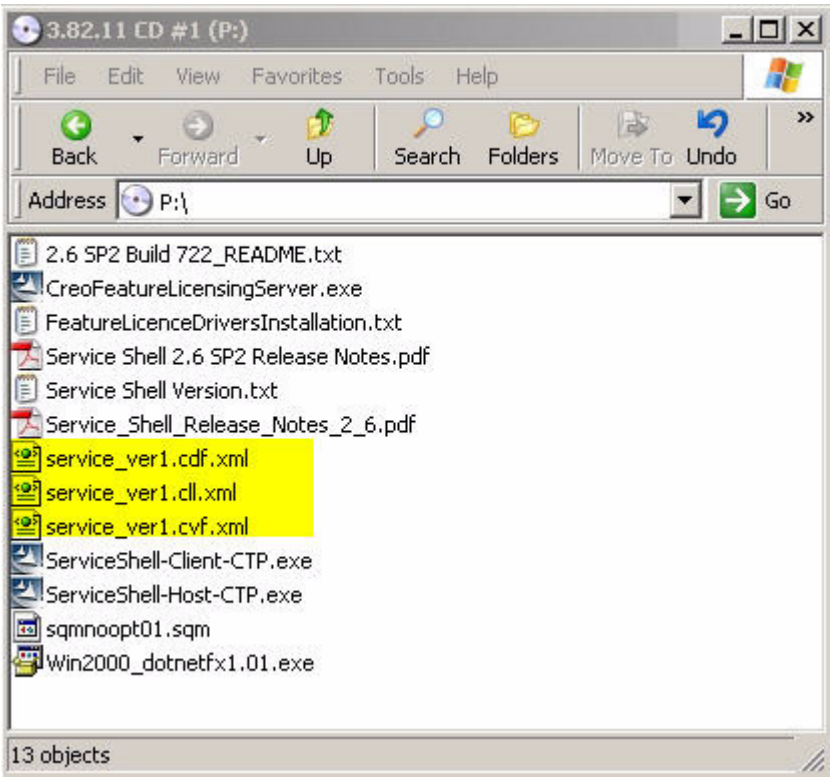

6. Paste the three xml files into the **Database** folder (C:\Creo\FeatureLicensing\Database).
7. Restart the computer.

8. Install the service dongle into the computer's USB port.

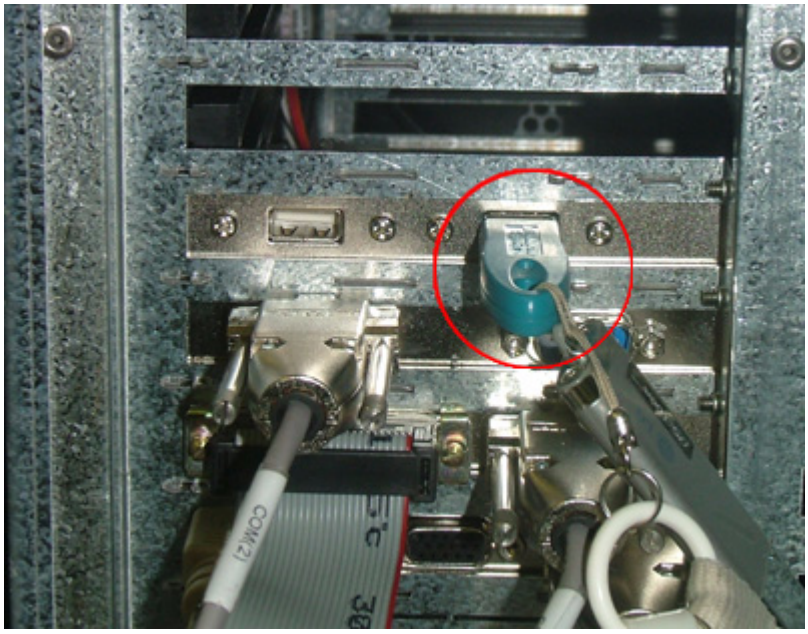

9. Double-click the **Creo Feature Licensing Server** icon—located on the Windows desktop.

Upon completion: Ensure that the green LED on the service dongle is lit.

Install FCO Tracker: Insert the CD and either double-click the **reg** file, or download the file from TechPlanet's FCO Updater utility page.

Date submitted: 24 Dec 2006

Technical contact: Alon Davidor