creo

APC PowerChute
Upgrading to Business Edition 7.0.4

CONTENTS

1 Overview....1

2 Detecting your PowerChute Version....1

3 Obtaining PowerChute Business Edition v7.0.4....3

4 Removing the old PowerChute Business Edition....3

5 Installing PowerChute Business Edition v7.0.4....4
- 5.1 Installing Agent....6
- 5.2 Upgrading Server....9
- 5.3 Installing Console....13

1 OVERVIEW

APC has announced that PowerChute® Business Edition v6.x or below will cease to operate after July 27, 2005.

APC Notice: http://nam-en.apc.com/cgi-bin/nam_en.cfg/php/enduser/std_adp.php?p_sid=wSAYGiKh&p_lva=&p_faqid=7202&p_created=1119891241&p_sp=cF9zcmNoPSZwX2dyaWRzb3J0PSZwX3Jvd19jbnQ9NDI3JnBfcGFnZT0x&p_li

Essentially, version 6.x must be removed and version 7.0.4 installed in its place.

If you are **not** comfortable doing this procedure yourself, APC encourages you to call their support center for assistance with the upgrade.

APC Support:
1 – 800 – 800 – 4272, **select 4** (for Technical Support), **select 1** (for SmartUPS).

This document covers Windows® 2000, XP, and Windows 2003 only. For Windows NT® 4.0 please contact APC directly for upgrade assistance.

2 DETECTING YOUR POWERCHUTE VERSION

You only need to follow this Procedure if you are running PowerChute Business Edition version 6.x or less. If you are running PowerChute Plus, PowerChute Network Shutdown, or PowerChute Business Edition 7.x you can skip this procedure.

1) From the Start button select **Programs -> APC PowerChute Business Edition -> Console**. Note. If you did **not** see APC PowerChute **Business Edition** in the Start Menu you do not have Business Edition and you can skip the procedure.


2) Determine your **Version** of PowerChute Business Edition.

   a) At the Console Login prompt enter the following information and click **Connect**.




User Name	**administrator**
Password	**creo**
Server	**<leave as default>**

   b) At the Console window select **Help -> About** from the top menu bar.

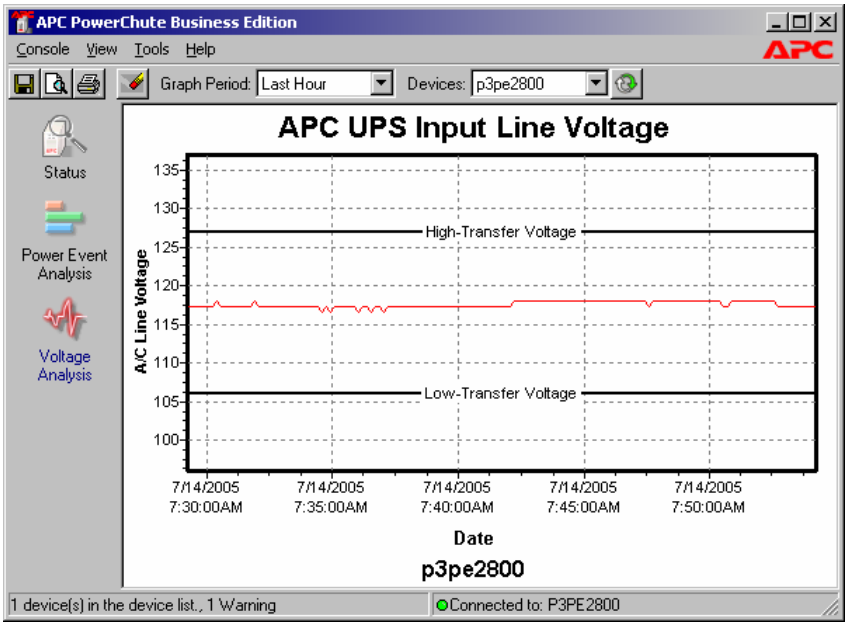

c) You should see the PowerChute Business Edition **version** on the About window.

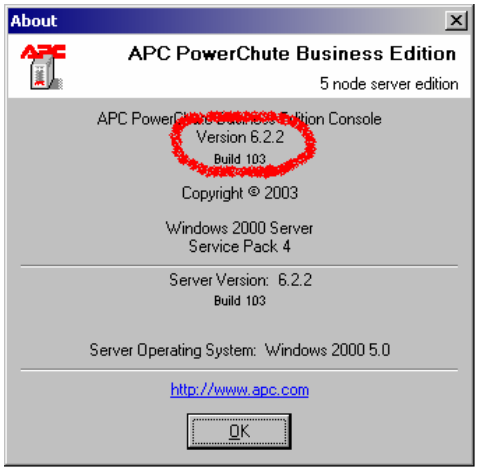

d) If your Version is **6.x or below** you must **continue on** with the upgrade procedure.

3 OBTAINING POWERCHUTE BUSINESS EDITION V7.0.4


With any computer connected to the Internet you can get the PowerChute Business Edition v7.0.4 Installation file directly from APC.

1) With your Internet Browser go to http://www.apcc.com/tools/download
2) Under **Filter By** select **PowerChute Business Edition**.
3) Select **Free Download** button beside the **PowerChute Business Edition Basic v7.0.4**.
4) Select under Windows 2000 the **PowerChute Business Edition v7.0.4 for Windows 2003/XP/2000** (file size 49745).
5) If you have not registered with APC previously select Register to Download. Otherwise start the download.
   a) Fill in the required information and click **Submit**.
   b) Select the **Click Here** to continue with the download.
6) If you agree to the **License Terms** select **Accept**.
7) Select the **Click Here to Download**. Note that it will take a minute to initiate the download.
8) Select Save and save the file to a folder on the Server you are upgrading. The name of the file is **pcbasetup.exe**.

4 REMOVING THE OLD POWERCHUTE BUSINESS EDITION

1) From the Start button select **Settings -> Control Panel**.

2) Select **Add/Remove Programs**. you should see the following:

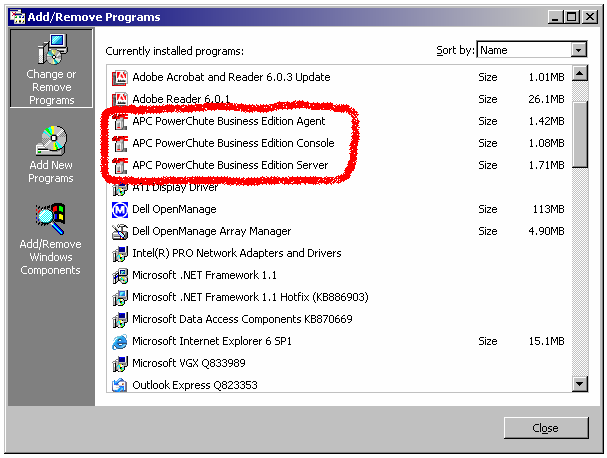

3) Remove the APC software in this order:

   a) Select **APC PowerChute Business Edition <u>Console</u>** and select **Remove**. Select **OK** to Confirm Delete and then **Finish**.

   b) Select **APC PowerChute Business Edition <u>Server</u>** and select **Remove**. Select **OK** to Confirm Delete and then **Finish**.


   c) Select **APC PowerChute Business Edition <u>Agent</u>** and select **Remove**. Select **OK** to Confirm Delete and then **Finish**.

4) Reboot your computer.

5 INSTALLING POWERCHUTE BUSINESS EDITION V7.0.4

1) Run the file **pcbesetup.exe**.


2) Select **Setup**.

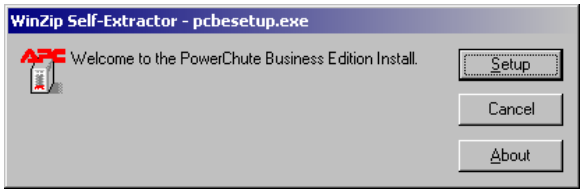

3) Select **Install Product**.




4) Select **Install Basic Version**.

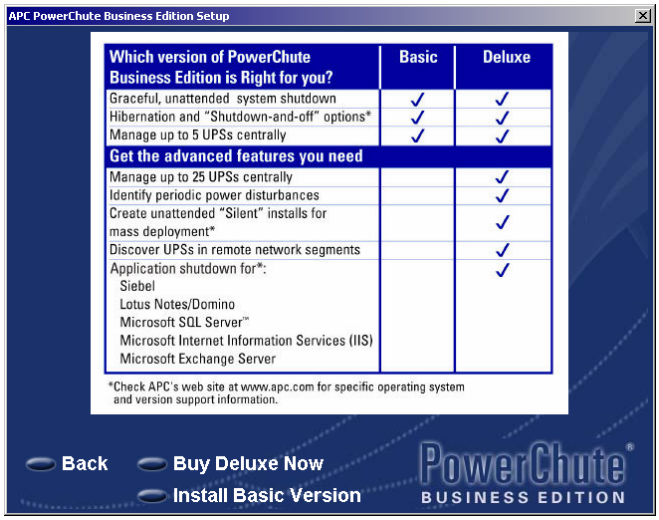


5.1 Installing Agent


1) At the Product Installation window select **Install** for **Windows Agent**.

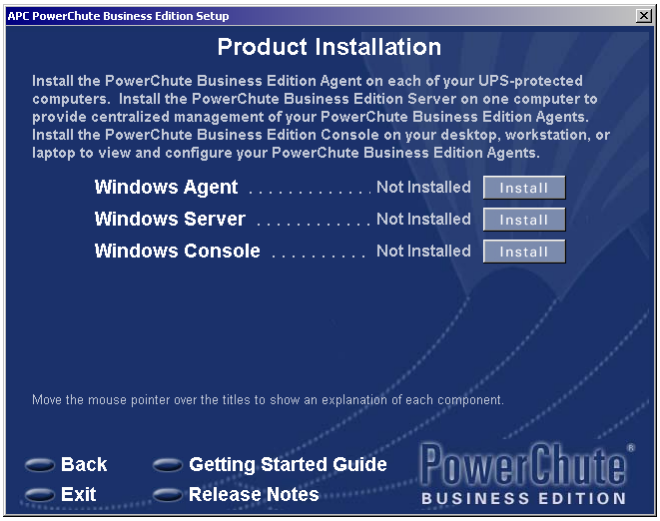


2) Select **Next** to Installing Agent prompt

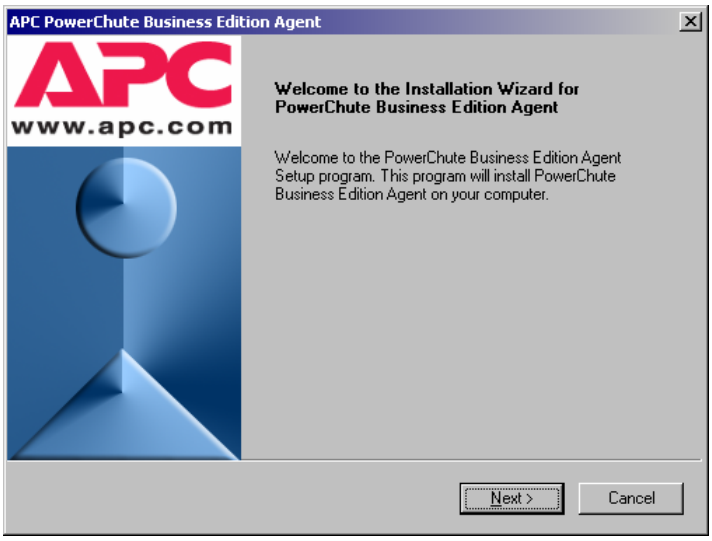


3) If you accept the terms of the license agreement click Yes.

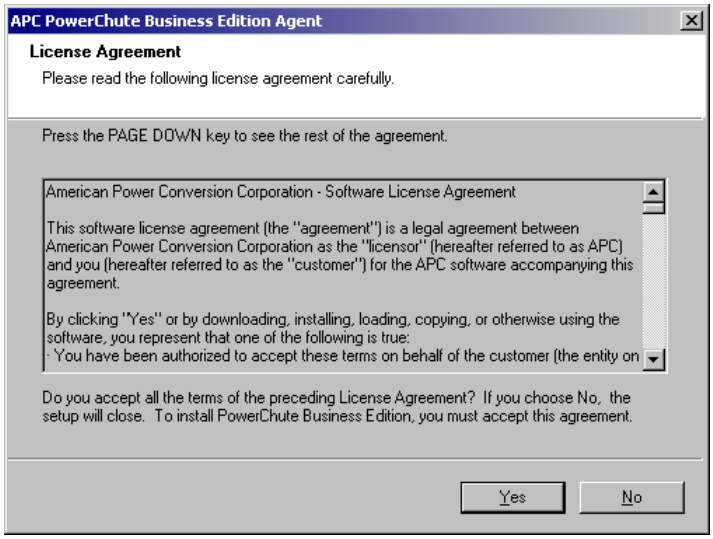


4) Accept the default directory and click **Next**.

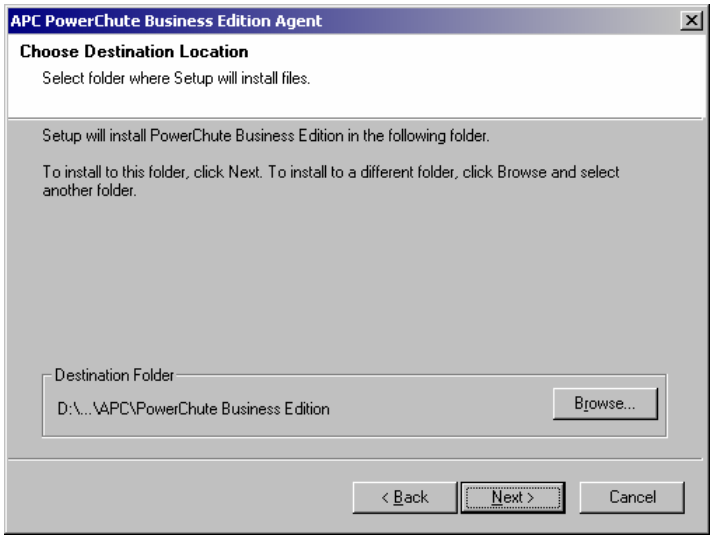

5) Click **No** when asked, "Would you like to automatically search all communications ports for an APC UPS".

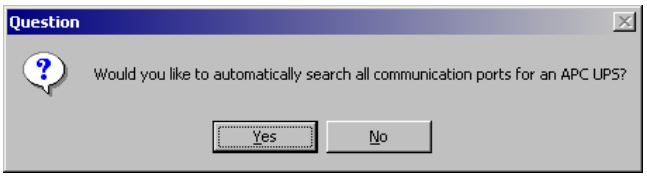


6) A dialog box will now appear which will prompt you to select the UPS type and Communication Port that the PowerChute Agent's host uses.

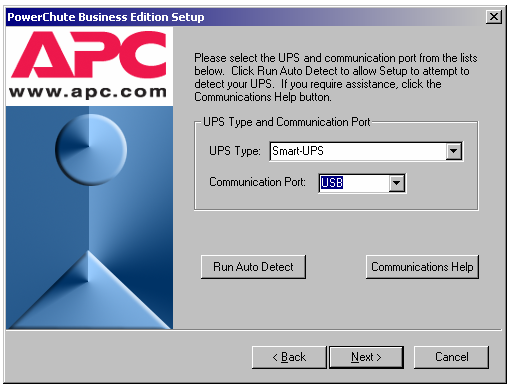

a) Select the following:


UPS Type:	Smart UPS
Communications Port	COM2 or USB depending on how you are connected.

b) Click **Next**. Enter the following Username and Password and **note case sensitivity for both**.

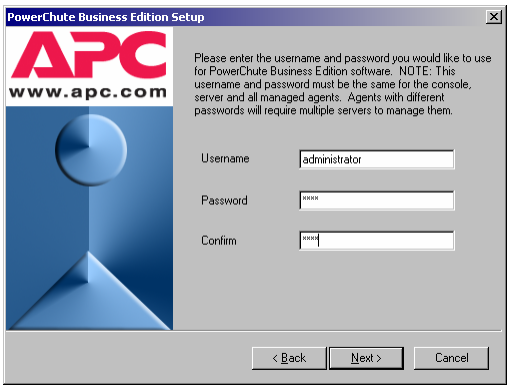


Username	**administrator**
Password	**creo**

7) Select **Finish** to the Agent Install.

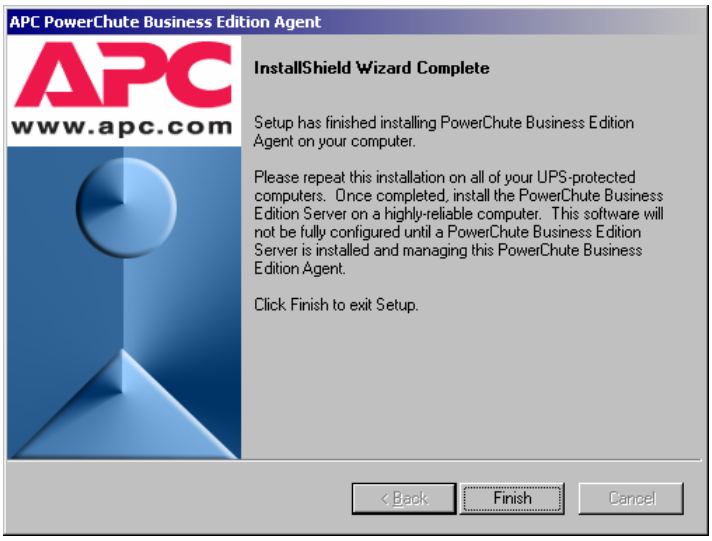


5.2 Upgrading Server


1) At the Product Installation Window select **install** to **Windows Server**.

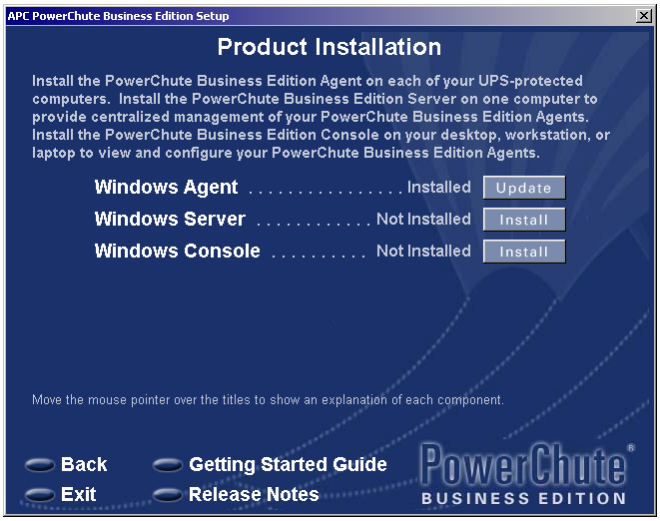


2) Select **Next** to the **Welcome message**.

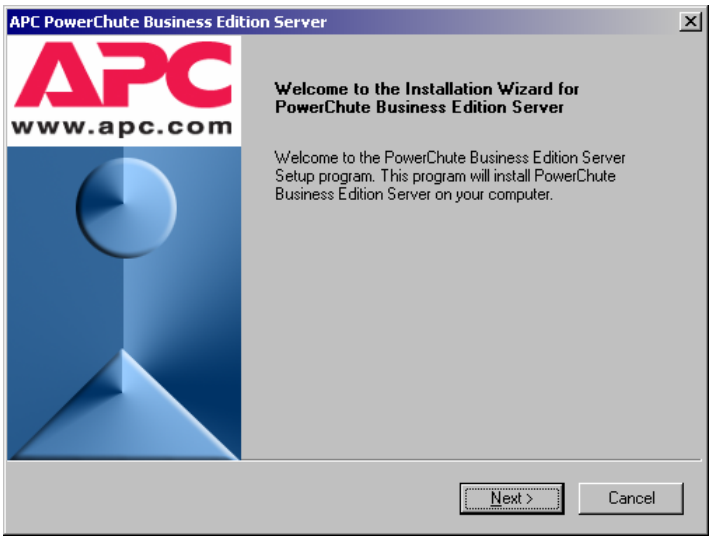

3) If you accept the terms of the **License Agreement** click **Yes**.

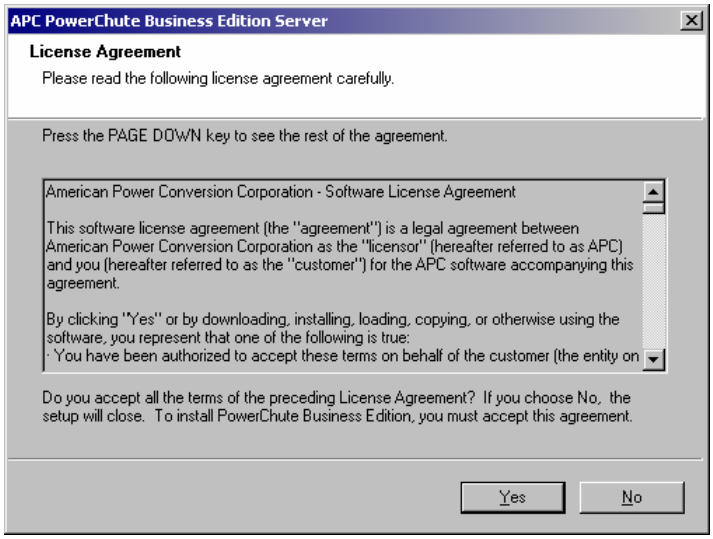


4) Connect using the following credentials.

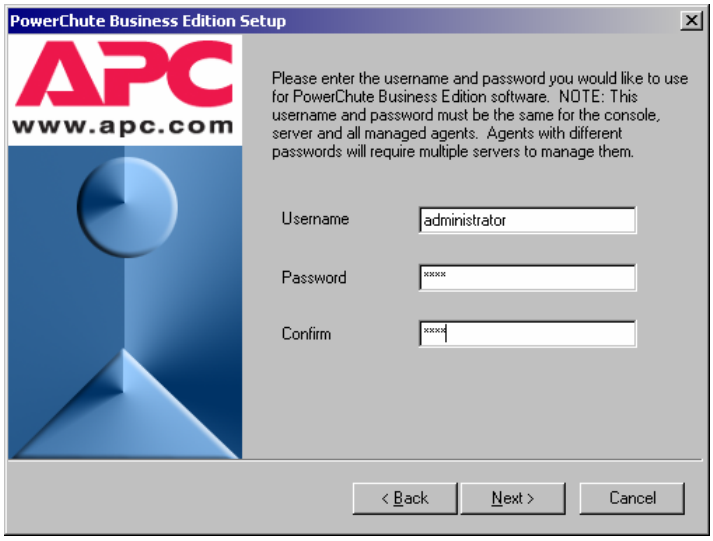


Username	**administrator**
Password	**creo**

5) **Uncheck** the Check for Product Updates and click **Next**.

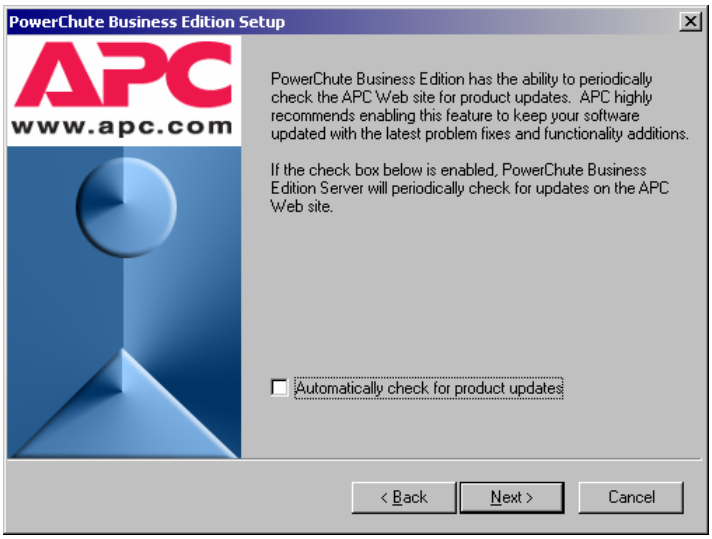


6) Select **Finish** to the Agent Install.

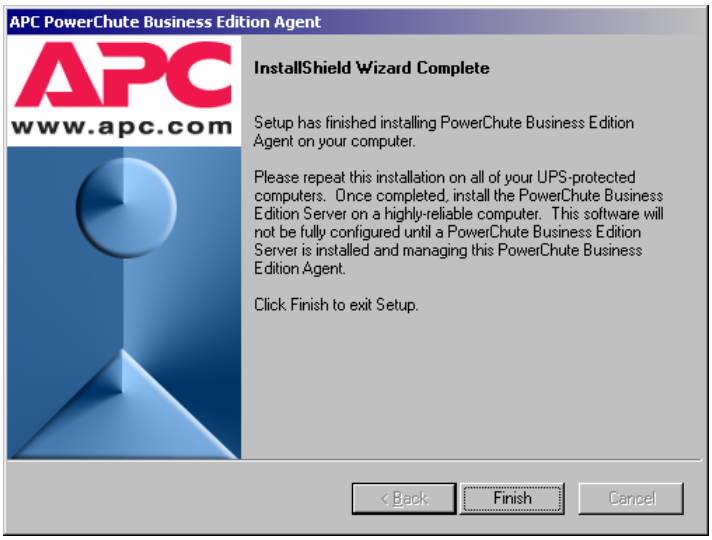


7) Create your configuration profile (These are the global settings for all of your PowerChute Agents):


   a) Click **Next** to the Create Configuration Profile window.

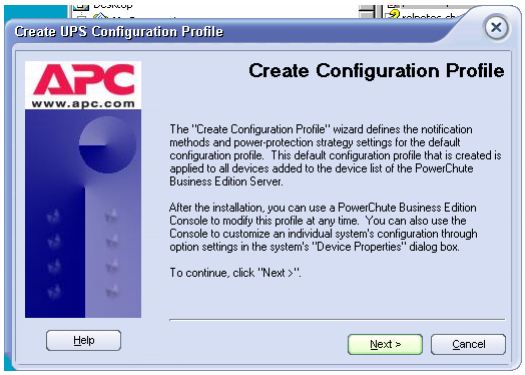


   b) Select **Broadcast Messages** check box, and then click **Next**.

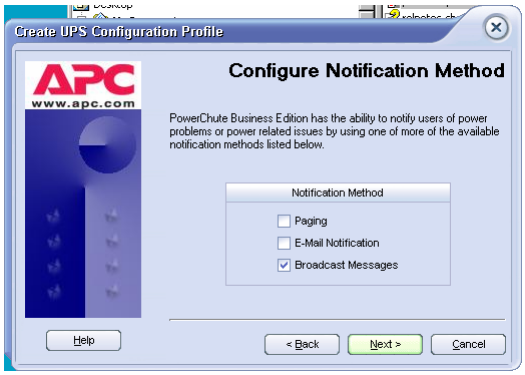

c) Select the **Entire Domain** check box, and then click **Next**.

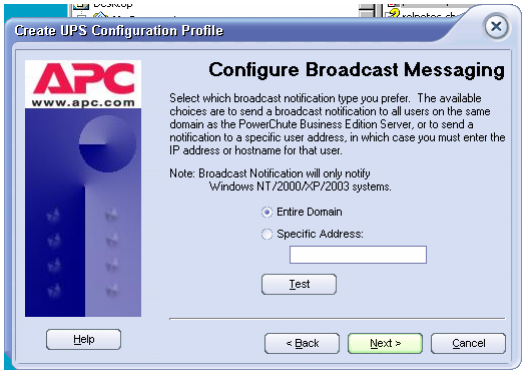


d) From the Power-Protection Strategy window, select the **Preserve Battery Power** check box, and then click **Next**.

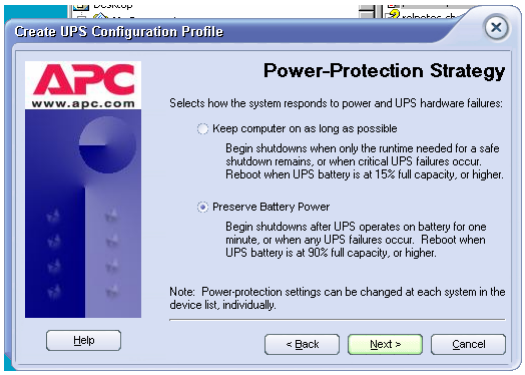


e) Click **Next** to the next few prompts and then **Finish** to the Changes Complete window.

f) From the Device List Configuration window, select the Agent (Should be the Server Name) under **Discovered Devices:** and click **Add**

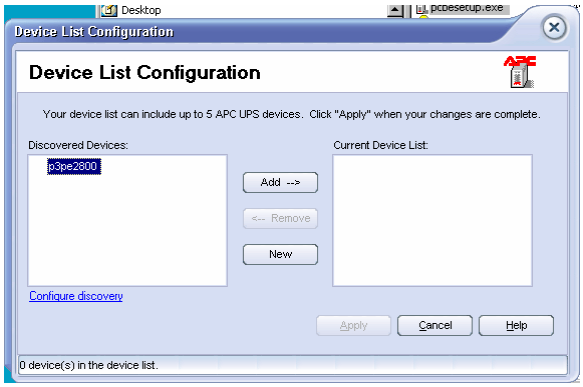


g) Click **Apply.** You should see the Server start collecting information from the Agent and complete successfully.

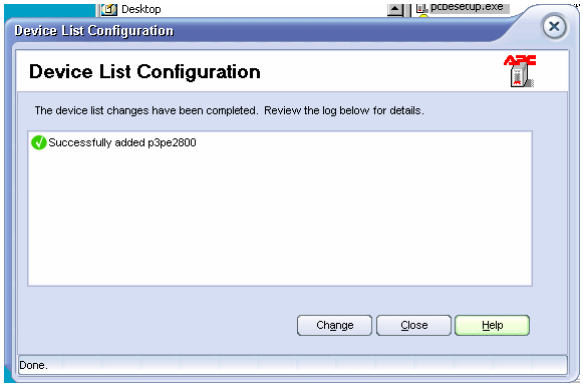


h) Select **Close**.

8) If you so choose you can Register Online, otherwise select **No** the Register Online.

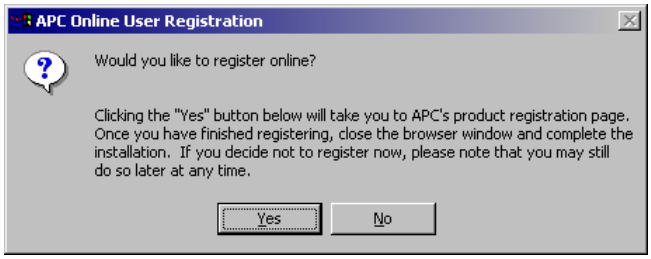


5.3 Installing Console


1) At the Product Installation Window select **Install** to **Windows Console**.

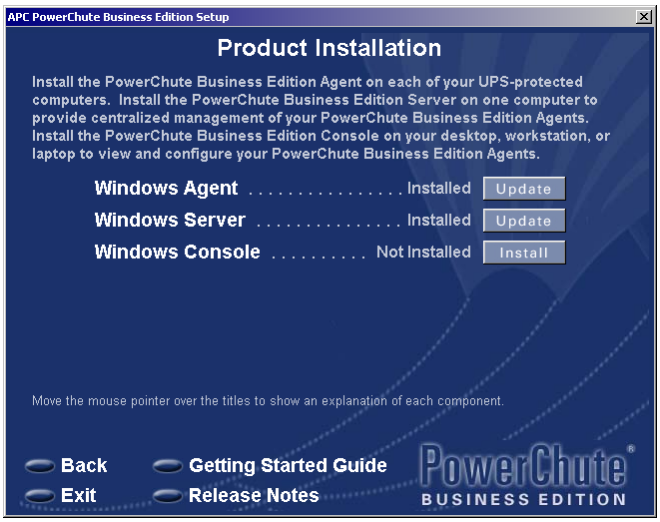


2) Select **Next** to the Welcome prompt.

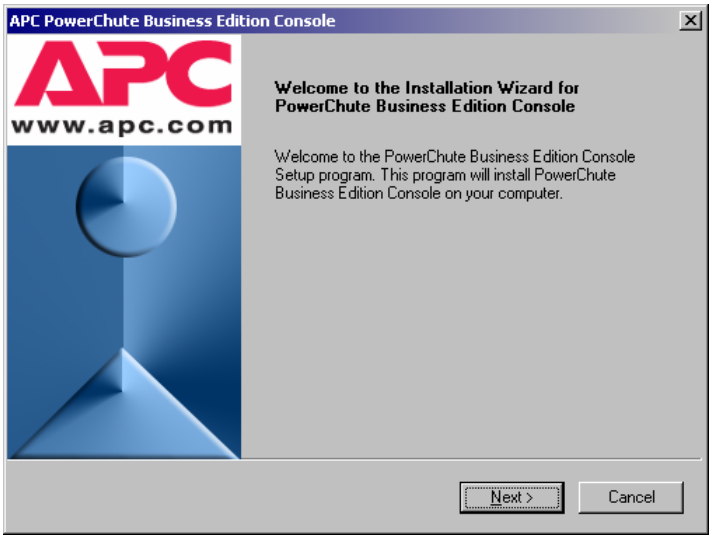


3) If you accept the terms of the **License Agreement** click **Yes**.

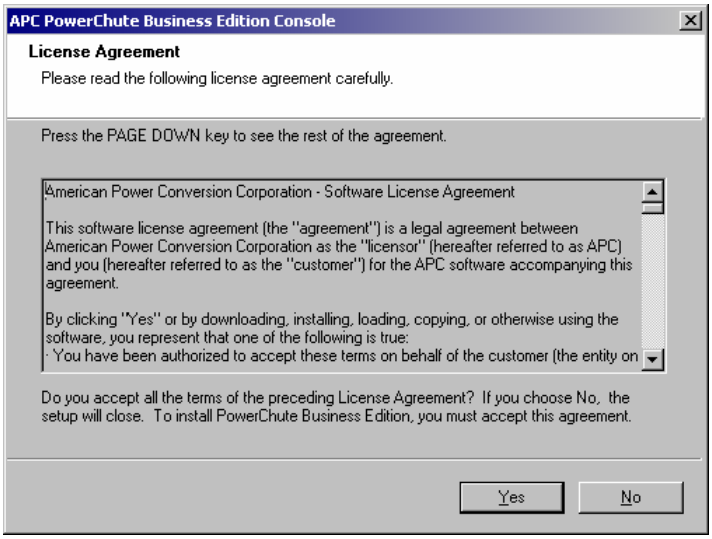

4) **Uncheck** the **Launch Business Edition Console** checkbox and click **Finish**.

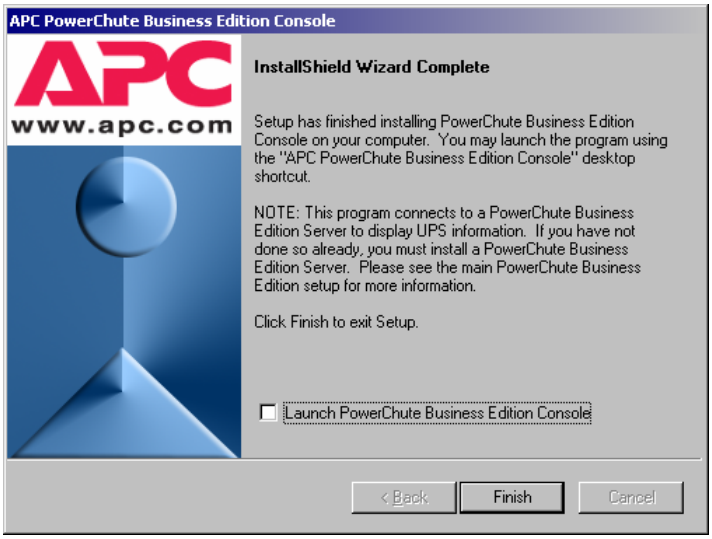

5) Select **Exit** to the **Product Installation** screen

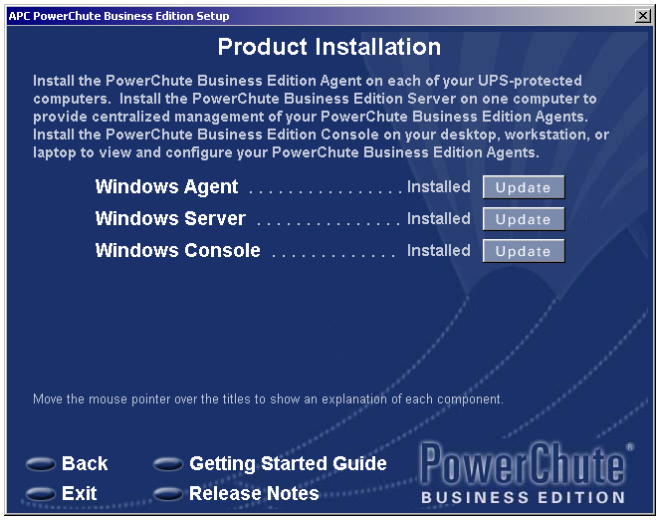

Your upgrade is now complete. Please reboot for changes to take effect.

About Creo

Creo is a world leader in solutions for the graphic arts industry. Core product lines include image capture systems; inkjet proofers; thermal imaging devices for films, plates, and proofs; professional color and copydot scanning systems; workflow management software; and proofing and printing consumables. Creo is also an original equipment manufacture supplier of on-press imaging technology, components for digital presses, and color servers for high-speed, print-on-demand digital printers. Creo trades under the symbols CREO on NASDAQ and CRE on the Toronto Stock Exchange. www.creo.com

© 2005 Creo Inc. The Creo product names mentioned in this document are trademarks or service marks of Creo Inc. and may be registered in certain jurisdictions. Other company and brand, product, and service names are for identification purposes only and may be trademarks or registered trademarks of their respective holders. Data is subject to change without notice.